
**Installation Instructions** 

# **High Temperature kit**

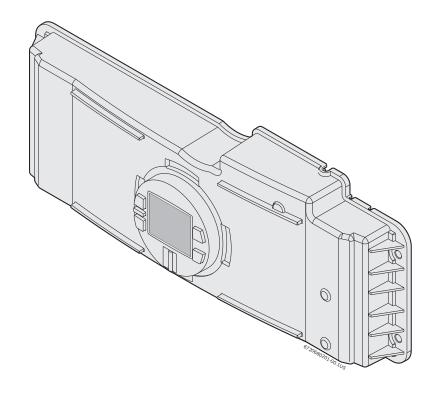

Models: C1050ES, 940ESO, 940ES, 830ES



**Warning:** This kit shall be installed by a qualified service agency in accordance with these instructions and all applicable codes and requirements of the authorities having jurisdiction.







# 1 Installation



**Note:** For commercial applications the heat exchanger warranty is 2 years, from date of original installation and operation. For more details consult the water heater's installation manual for warranty period.

#### 1.1 Tools needed:

- Phillips head screw driver
- · Needle-nosed pliers.



Note: Avoid touching printed circuit board as static discharge may damage circuitry.

# 1.2 Preparation

- ▶ Push power button to "OFF" and unplug power cord.
- ► Loosen two Phillips head screws on bottom rear of front cover. Pull cover bottom outwards then lift cover upwards to remove.

### 1.3 Removing control unit

- ► Remove three Phillips screws on front of control unit. (Fig. 1, pos.1).
- ▶ Turn control unit to expose the rear. (Fig. 2, pos. 2).

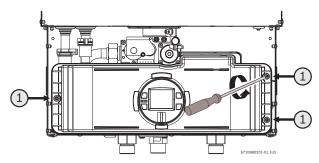


Fig. 1 Control unit front

 Remove rear cover from control unit to expose circuit board electrical connections. (Fig. 2).

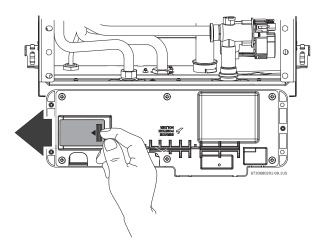


Fig. 2 Control unit rear (wiring not shown for clarity purposes)

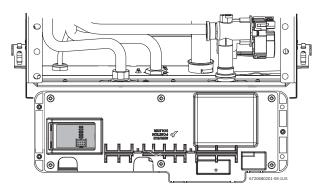


Fig. 3

2 6 720 645 518

#### **TEMPERATURE SETTINGS**



Insert jumpers on JP7 and JP8 connections on control board. (Fig. 4).

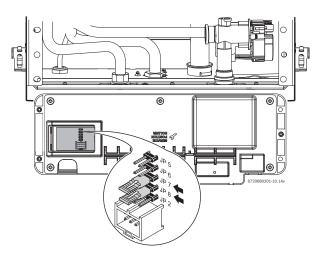


Fig. 4

	Temperature range	
Jumper	ON	OFF (default)
JP7 + JP8	38°C - 84°C	38°C - 60°C
	100°F - 184°F	100°F - 140°F

Table 1

- ► Reinstall the rear cover.
- ► Reinstall the control unit securing the 3 Philips head screws.
- ▶ Plug in power cord.



For applications where the hot water is recirculated through the heater, see Technical Service Bulletin AP-03 Direct Recirculation, to avoid damage in internal components.

#### To memorize the temperature:

▶ Power on the appliance by pressing the On/Off button.

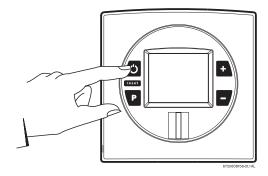


Fig. 5

To select hot water temperature:

▶ Press the button in order to reach temperatures above 140°F (71°C).

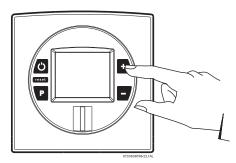


Fig. 6

Press and hold the program button for 5 seconds to memorize selected temperature.



Replacement Parts available from:

# BOSCH THERMOTECHNOLOGY CORP.

50 Wentworth Avenue Londonderry, NH 03053 Tel. 866-330-2730 www.boschpro.com Bosch Termotecnologia SA Estrada de Cacia 3800 - 533 Cacia - PORTUGAL