Installation Instructions

Water Filter Kit




Accessory for models: GWH 715ES, GWHC 800ES, GWHC 920ES, GWHC 920 ESC

C1210ESC, C1210ES, C1050, 940ES, 940ESO, 830ES

Spare part for models: 2400 ES, 2700 ES, Evolution 500, Integra 500

Part no. 8 703 305 356

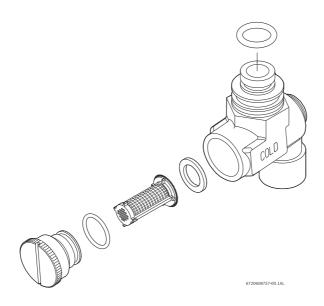

Warning: This kit must be installed by a qualified installer in accordance with these instructions and all applicable codes and requirements of the authorities having jurisdiction.







1 Warning



Danger: The heater must be disconnected from the water supply.

This water filter kit includes:

· External water filter.

2 Installing water filter kit

Preparation:

- ► Close installer supplied water shutoff valves on hot and cold water piping to water heater.
- ▶ Release pressure relief valve to drain water from water heater.
- ▶ Disconnect cold water supply piping from connection on bottom of heater. Any residual water should drain from the heater.

To remove front cover:

▶ Loosen the two Phillips head screws located on bottom rear of cover (see Fig. 1).

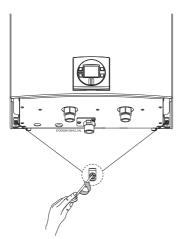


Fig. 1 Loosen the two screws

▶ Lift front cover upward and remove.

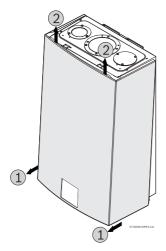


Fig. 2 Remove the front cover

2 6 720 608 757

3 Mounting instructions

▶ Remove the three screws from the control unit.

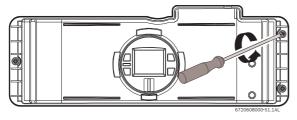


Fig. 3

▶ Put the control unit in the service position by engaging its tabs with the holes in the bottom horizontal sheet metal.

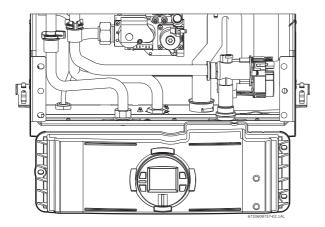


Fig. 4 Service position

▶ Remove the clips from the inlet fitting and bottom of the water valve. Remove inlet fitting and filter from water heater. Have a rag handy to catch any residual water that may come out. Keep water away from control unit. Replace with the new water filter kit, see Fig. 5.

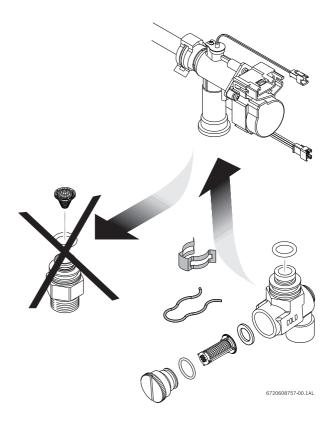


Fig. 5 Replace water filter

➤ After replacing the water filter, reassemble all parts in reverse order and check all water connections for leakage.

3

6 720 608 757



BOSCH THERMOTECHNOLOGY CORP.

50 Wentworth Avenue Londonderry, NH 03053 Tel. 866-330-2730 www.boschpro.com

Bosch Termotecnologia SA Estrada de Cacia 3800 - 533 Cacia - PORTUGAL