



WARNING:

Improper installation, setup, modification, operation or maintenance of the heating system can cause personal injury and property damage.

Follow each appliances' instructions precisely.

For assistance or further information, contact a trained and certified installer, service provider, or the gas supply company.

In Massachusetts, the boiler must be installed by a licensed plumber or gas fitter.

Application drawings in this manual are conceptual only and do not purport to address all design, installation, code, or safety considerations.

The diagrams in this manual are for reference use by code officials, designers and licensed installers. It is expected that installers have adequate knowledge of national and local codes, as well as accepted industry practices, and are trained on equipment, procedures, and applications involved. Drawings are not to scale.

Refer to the boiler, control and module installer manuals for additional detailed information!

Gas Condensing Wall Hung & Floor Standing Boilers

Bosch Greenstar™

Greenstar & Greenstar FS 100, 151, 131 Combi Boiler

Greenstar & Greenstar FS 57, 79, 100, 131, 151 Regular Boiler



BOSCH

Applications Manual



Table of Contents

Single Zone Systems	6
System # 1 Greenstar Combi Wall Boiler Single Zone Baseboard with Standard Thermostat (drycontact only) and FW200 (optional)	6
System # 2 Greenstar Combi Wall Boiler Single Zone Baseboard with Bosch CRC control	8
System # 3 Greenstar Combi Floor Boiler Single Zone Baseboard with Standard Thermostat (dry contact only)	10
System # 4 Greenstar Combi Floor Boiler Single Zone Baseboard with Bosch CRC control	12
System # 5 Greenstar Heat only Wall Boiler Single Zone Baseboard with Standard Thermostat (dry contact only) and FW200 (optional)	14
System # 6 Greenstar Heat only Wall Boiler Single Zone Baseboard with Bosch CRC control	16
System # 7 Greenstar Heat only Floor Boiler Single Zone Baseboard with Standard Thermostat (dry contact only)	18
System # 8 Greenstar Heat only Floor Boiler Single Zone Baseboard with Bosch CRC control	20
Multi Zone Systems using Circulators	22
System # 9 Greenstar Combi Wall Boiler Multi zone system using circulators with standard zone relay (FW200 optional)	22
System # 10 Greenstar Combi Wall Boiler Multi zone system using circulators and Bosch Comfort Zone Manager (CZM100)	24
System # 11 Greenstar Combi Floor Boiler Multi zone system using circulators with standard zone relay (FW200 optional)	26
System # 12 Greenstar Combi Floor Boiler Multi zone system using circulators and Bosch Comfort Zone Manager (CZM100)	28
System # 13 Greenstar Heat only Wall Boiler Multi zone system using circulators with standard zone relay (FW200 optional) and indirect tank	30
System # 14 Greenstar Heat only Wall Boiler Multi zone system using circulators and Bosch Comfort Zone Manager (CZM100) and indirect tank	32
System # 15 Greenstar Heat only Floor Boiler Multi zone system using circulators with standard zone relay (FW200 optional) and indirect tank	34
System # 16 Greenstar Heat only Floor Boiler Multi zone system using circulators and Bosch Comfort Zone Manager (CZM100) and indirect tank	36

Table of Contents

Multi Zone Systems using Zone Valves	38
System # 17 Greenstar Combi WallBoiler Multi zone system using zone valves with standard zone relay (FW200 optional)	38
System # 18 Greenstar Combi Wall Boiler Multi zone system using zone valves and Bosch Comfort Zone Manager (CZM100)	40
System # 19 Greenstar Combi Floor Boiler Multi zone system using zone valveswith standard zone relay (FW200 optional)	42
System # 20 Greenstar Combi Floor Boiler Multi zone system using zone valvesand Bosch Comfort Zone Manager (CZM100)	44
System # 21 Greenstar Heat only Wall Boiler Multi zone system using zone valveswith standard zone relay (FW200 optional) and indirect tank	46
System # 22 Greenstar Heat only Wall Boiler Multi zone system using zone valvesand Bosch Comfort Zone Manager (CZM100) and indirect tank	48
System # 23 Greenstar Heat only Floor Boiler Multi zone system using zone valveswith standard zone relay (FW200 optional) and indirect tank	50
System # 24 Greenstar Heat only Floor Boiler Multi zone system using zone valvesand Bosch Comfort Zone Manager (CZM100) and indirect tank	52
Appendices	54
Appendix A Comfort Room Controller (CRC100) Quick set-up guide	54
Appendix B Primary/Secondary Piping requirements for Greenstar Wall Boiler	56
Appendix C FW200 Quick Set-up Guide	57
Appendix D Wiring of Hydro-Level Low Water Cut-off for Greenstar Wall Boiler	59
Appendix E Wiring of Hydro-Level Low Water Cut-off for Greenstar Floor Boiler	60

Explanation Of Symbols

Key To Symbols

Warnings



Warnings in this document are identified by a warning triangle printed against a grey background. Keywords at the start of a warning indicate the type and seriousness of the ensuing risk if meas-

The following keywords are defined and can be used in this document:

- ▶ **DANGER** indicates a hazardous situation which, if not avoided, will result in death or serious injury.
- ▶ **WARNING** indicates a hazardous situation which, if not avoided, could result in death or serious injury.
- ▶ **CAUTION** indicates a hazardous situation which, if not avoided, could result in minor to moderate injury.
- ▶ **NOTICE** is used to address practices not related to personal injury.

Important information



This symbol indicates important information where there is no risk to people or property.

System # 1

Single Zone

Combi Wall Boiler

Baseboard

On/off Tstat

FW200

PRV
Relief piping

Purge
Drain

Room
Thermostat

Condensate
drain

Relief valve &
pressure gauge

Back-flow
preventer

Isolation
valve

Outdoor
air sensor

Baseboard

Expansion
Tank

Auto-Fill


Air
Eliminator

DISCLAIMER: Application drawings in this manual are conceptual only and do not purport to address all design, installation, code, or safety considerations. The diagrams in this manual are for reference use by code officials, designers and licensed installers. It is expected that installers have adequate knowledge of national and local codes, as well as accepted industry practices, and are trained on equipment, procedures, and applications involved. Drawings are not to scale. Refer to the boiler, control and module installer manuals for additional detailed information.

Note: Greenstar Internal circulator can support a single zone loop not to exceed 4 gpm at 12 feet of head. See pump curves in manual for pump capacities at alternate flow rates.

System #1


Heatronic Internal Wiring

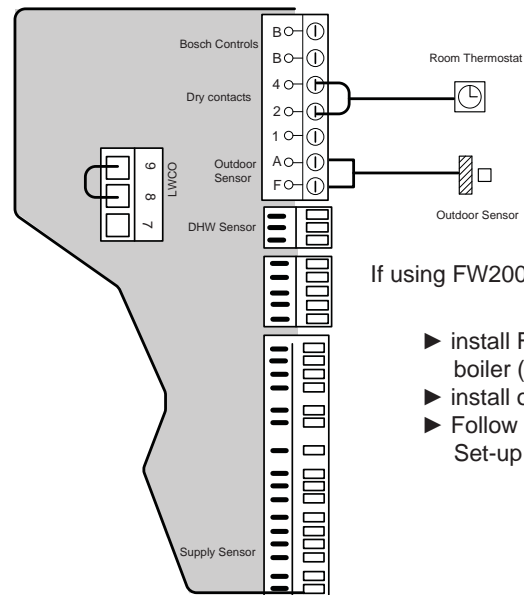

Note: For Low Water Cutoff Wiring see Appendix D of this manual

If using FW200 (Optional):

- ▶ install FW200 on front of boiler (see manual)
- ▶ install outdoor air sensor
- ▶ Follow FW200 Quick Set-up guide in Appendix C

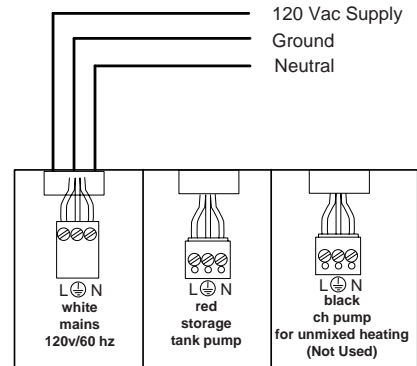

External Boiler Junction box

Wiring:

Low Voltage

- ▶ Remove factory jumper from terminal #2 & #4 inside Heatronic control and connect non-power robbing thermostat (dry contacts only)


If using FW200 (Optional):


- ▶ install FW200 on front of boiler (see manual)
- ▶ install outdoor air sensor
- ▶ Follow FW200 Quick Set-up guide in Greenstar Manual


Line Voltage

- ▶ Wire Main power supply (120 v) to White molex

Heatronic Settings:

Boiler Heating Dial 	Typical supply temperatures	Application
1	approx. 95 °F (35 °C)	Frost protection
2	approx. 109 °F (43 °C)	
3	approx. 122 °F (50 °C)	Radiant floor heating
4	approx. 140 °F (60 °C)	Panel radiator system
5	approx. 153 °F (67 °C)	Cast Iron radiator system
6	approx. 167 °F (75 °C)	
max	Approx. 194 °F (90°C)	Baseboard & convector system

DHW thermostat 	Typical DHW temperatures
min	approx. 104 °F (40 °C)
e	approx. 122 °F (50 °C)
max	approx. 140 °F (60 °C)

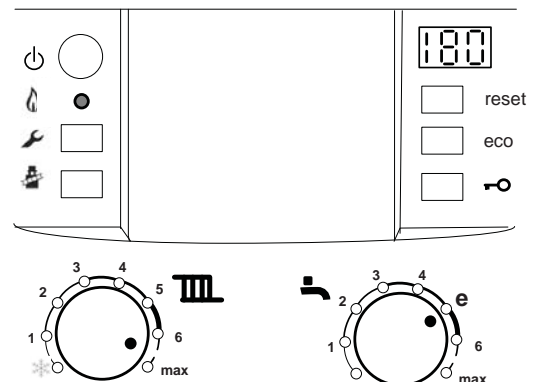

System # 2

Single zone Combi wall boiler Baseboard NSC Controls

DISCLAIMER: Application drawings in this manual are conceptual only and do not purport to address all design, installation, code, or safety considerations. The diagrams in this manual are for reference use by code officials, designers and licensed installers. It is expected that installers have adequate knowledge of national and local codes, as well as accepted industry practices, and are trained on equipment, procedures, and applications involved. Drawings are not to scale. Refer to the boiler, control and module installer manuals for additional detailed information.

Created	TK 02/20/15
Released	
Changed	
Bases	
No.	.
State	


Bosch

	PRV Relief piping
	Purge Drain
	Comfort Room Controller
	Condensate drain
	Relief valve & pressure gauge
	Back-flow preventer
	Isolation valve
	Outdoor air sensor
	Baseboard
	Expansion Tank
	Auto-Fill
	Air Eliminator


Note:Greenstar Internal circulator can support a single zone loop not to exceed 4 gpm at 1.2 feet of head. See pump curves in manual for pump capacities at alternate flow rates.

System #2

Heatronic Internal Wiring

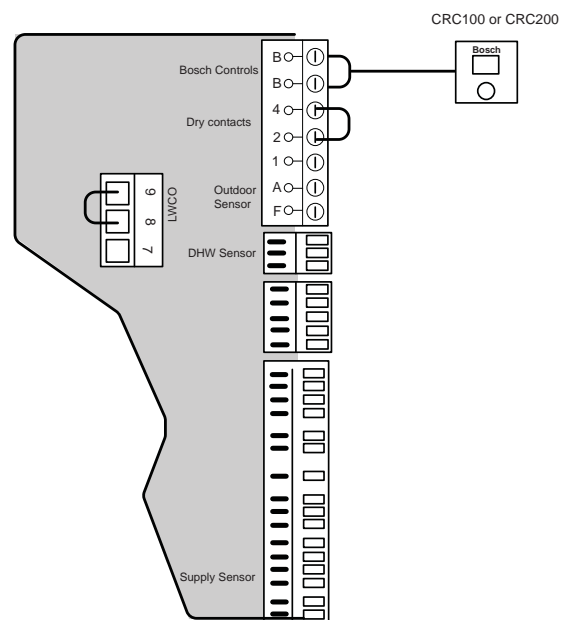

Note: For Low Water Cutoff Wiring see Appendix D of this manual

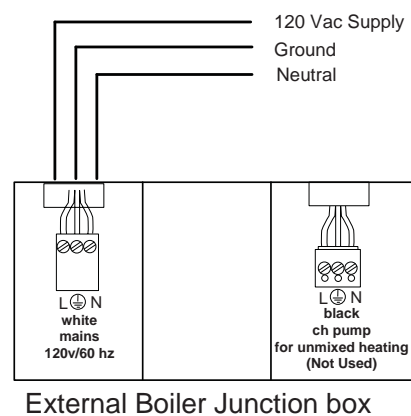

Wiring:


Low Voltage


- Wire Comfort Room Controller (CRC100 or CRC200) to Terminals B B of Heatronic control
- See Appendix A for Room Controller Settings


Line Voltage

- Wire Main power supply (120 v) to White molex

Heatronic Settings:

Boiler Heating Dial 	Typical supply temperatures	Application
1	approx. 95 °F (35 °C)	Frost protection
2	approx. 109 °F (43 °C)	
3	approx. 122 °F (50 °C)	Radiant floor heating
4	approx. 140 °F (60 °C)	Panel radiator system
5	approx. 153 °F (67 °C)	Cast Iron radiator system
6	approx. 167 °F (75 °C)	
max	Approx. 194 °F (90 °C)	Baseboard & convector system

DHW thermostat 	Typical DHW temperatures
min	approx. 104 °F (40 °C)
e	approx. 122 °F (50 °C)
max	approx. 140 °F (60 °C)

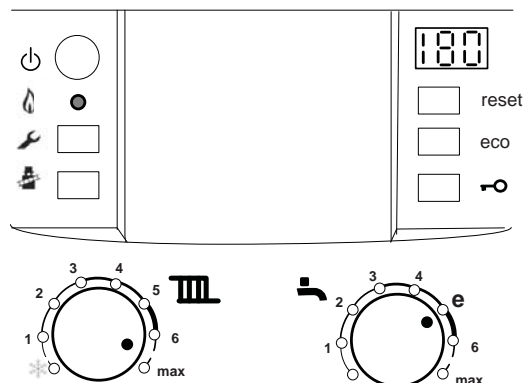

System #3

Single Zone

Combi floor boiler

Baseboard

On/off Thermostat

DISCLAIMER: Application drawings in this manual are conceptual only and do not purport to address all design, installation, code, or safety considerations. The diagrams in this manual are for reference use by code officials, designers and licensed installers. It is expected that installers have adequate knowledge of national and local codes, as well as accepted industry practices, and are trained on equipment, procedures, and applications involved. Drawings are not to scale. Refer to the boiler, control and module installer manuals for additional detailed information.

Created

Released

Changed

Bases

No.

State

Bosch


	PRV Relief piping
	Purge Drain
	Room Thermostat
	Condensate drain
	Relief valve & pressure gauge
	Back-flow preventer
	Isolation valve
	Outdoor air sensor
	Baseboard
	Expansion Tank
	Auto-Fill
	Air Eliminator

Note:Greenstar Internal circulator can support a single zone loop not to exceed 4 gpm at 12 feet of head. See pump curves in manual for pump capacities at alternate flow rates.

Note: additional expansion tank shown – internal expansion tank in combi boiler models may be adequate for standard systems –see boiler manual for details.

Note: Internal Low Loss Header in closed position

System #3

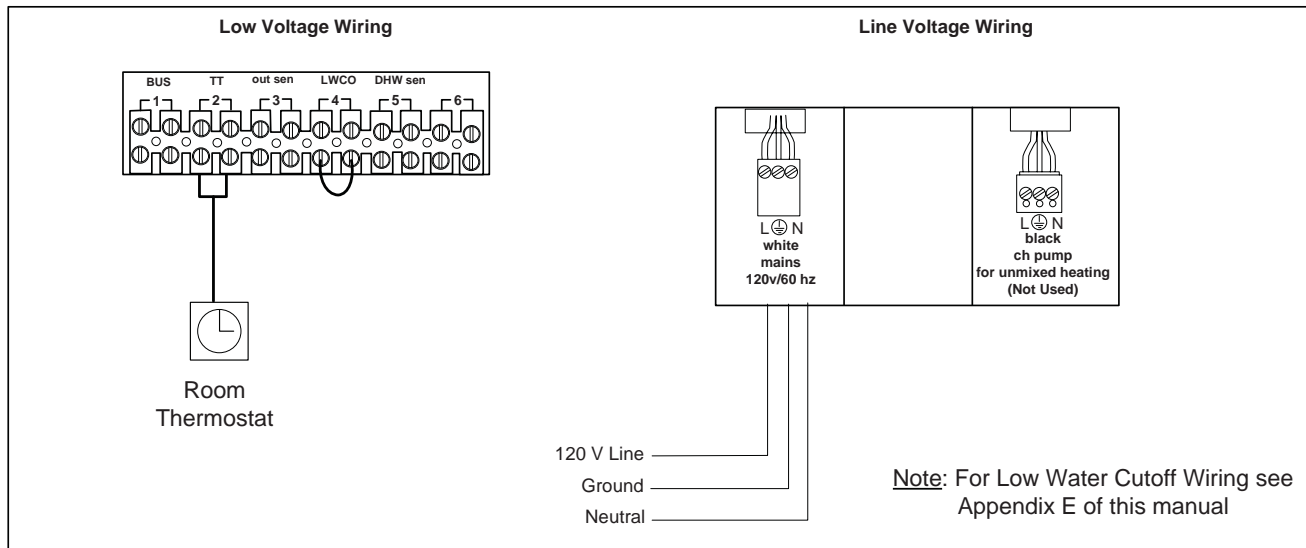

Wiring:


Low Voltage


- Remove factory jumper from terminal #2 and connect non-power robbing thermostat (dry contacts only) to terminal #2


Line Voltage

- Wire Main power supply (120 v) to White molex








Heatronic Settings:

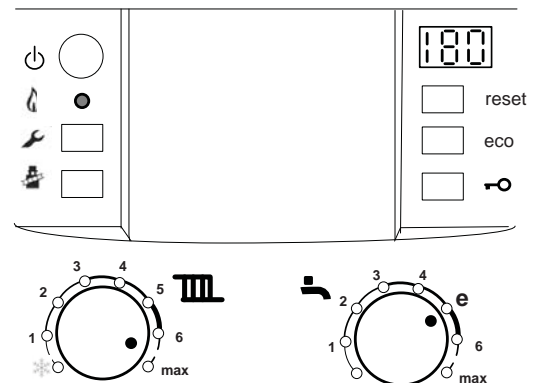











Boiler Heating Dial 	Typical supply temperatures	Application
1	approx. 95 °F (35 °C)	Frost protection
2	approx. 109 °F (43 °C)	
3	approx. 122 °F (50 °C)	Radiant floor heating
4	approx. 140 °F (60 °C)	Panel radiator system
5	approx. 153 °F (67 °C)	Cast Iron radiator system
6	approx. 167 °F (75 °C)	
max	Approx. 194 °F (90 °C)	Baseboard & convector system

DHW thermostat 	Typical DHW temperatures
min	approx. 104 °F (40 °C)
e	approx. 122 °F (50 °C)
max	approx. 140 °F (60 °C)




Single Zone
Combi floor boiler
Baseboard
NSC Controls

	PRV Relief piping
	Purge Drain
	Supply Sensor
	Comfort Room Controller
	Condensate drain
	Relief valve & pressure gauge
	Back-flow preventer

	PRV Relief piping
	Purge Drain
	Supply Sensor
	Comfort Room Controller
	Condensate drain
	Relief valve & pressure gauge
	Back-flow preventer
	Isolation valve
	Baseboard
	Expansion Tank
	Auto-Fill
	Air Eliminator



System #4

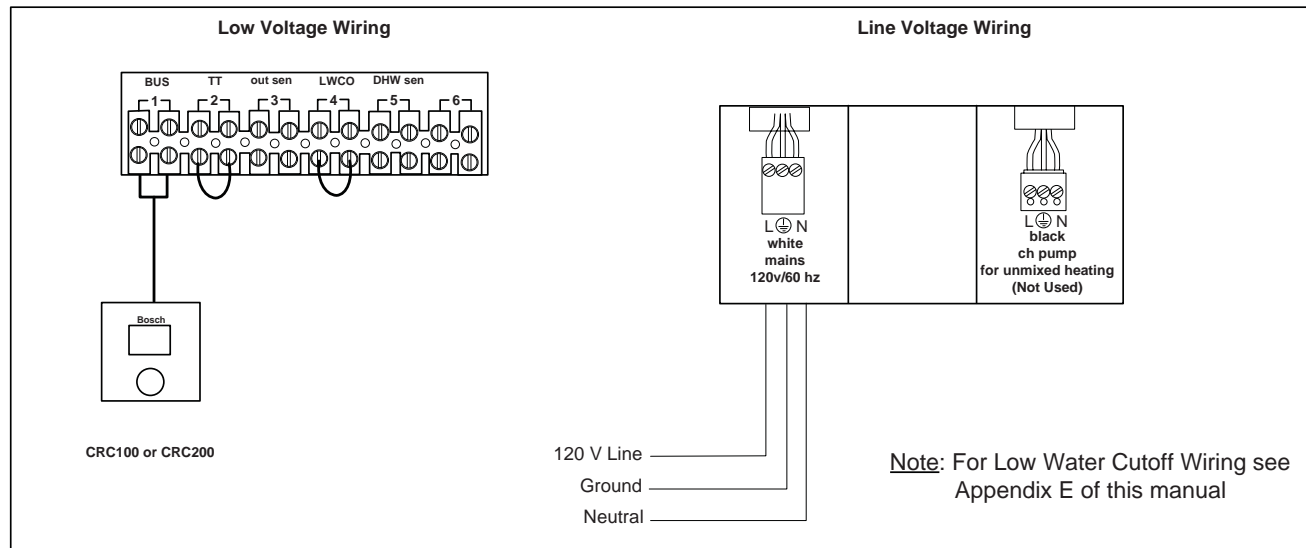**Wiring:****Low Voltage**


- ▶ Wire Comfort Room Controller (CRC100 or CRC200) to Terminal # 1 on back of Greenstar FS Boiler


- ▶ See Appendix A for Room Controller Settings


Line Voltage

- ▶ Wire Main power supply (120 v) to White molex

Heatronic Settings:

Boiler Heating Dial 	Typical supply temperatures	Application
1	approx. 95 °F (35 °C)	Frost protection
2	approx. 109 °F (43 °C)	
3	approx. 122 °F (50 °C)	Radiant floor heating
4	approx. 140 °F (60 °C)	Panel radiator system
5	approx. 153 °F (67 °C)	Cast Iron radiator system
6	approx. 167 °F (75 °C)	
max	Approx. 194 °F (90°C)	Baseboard & convector system

DHW thermostat 	Typical DHW temperatures
min	approx. 104 °F (40 °C)
e	approx. 122 °F (50 °C)
max	approx. 140 °F (60 °C)


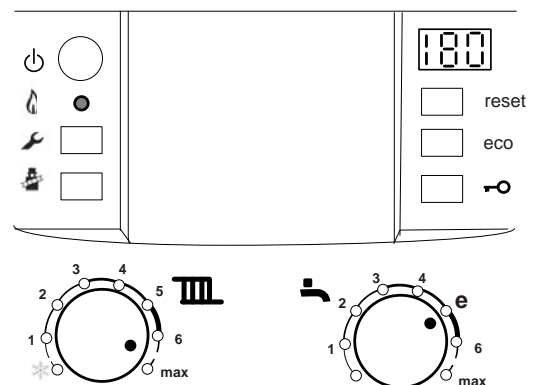












System # 5


Single Zone
Heat only wall boiler
Baseboard
On/off Thermostat

DISCLAIMER: Application drawings in this manual are conceptual only and do not purport to address all design, installation, code, or safety considerations. The diagrams in this manual are for reference use by code officials, designers and licensed installers. It is expected that installers have adequate knowledge of national and local codes, as well as accepted industry practices, and are trained on equipment, procedures, and applications involved. Drawings are not to scale. Refer to the boiler, control and module installer manuals for additional detailed information.

Created	TK
	02/20/15
Released	
Changed	
Bases	
No.	
State	
	Bosch


	PRV Relief piping
	Purge Drain
	Room Thermostat
	Condensate drain
	Relief valve & pressure gauge
	Back-flow preventer
	Isolation valve
	Outdoor air sensor
	Baseboard
	Expansion Tank
	Auto-Fill
	Air Eliminator

Note:Greenstar Internal circulator can support a single zone loop not to exceed 4 gpm at 12 feet of head. See pump curves in manual for pump capacities at alternate flow rates.

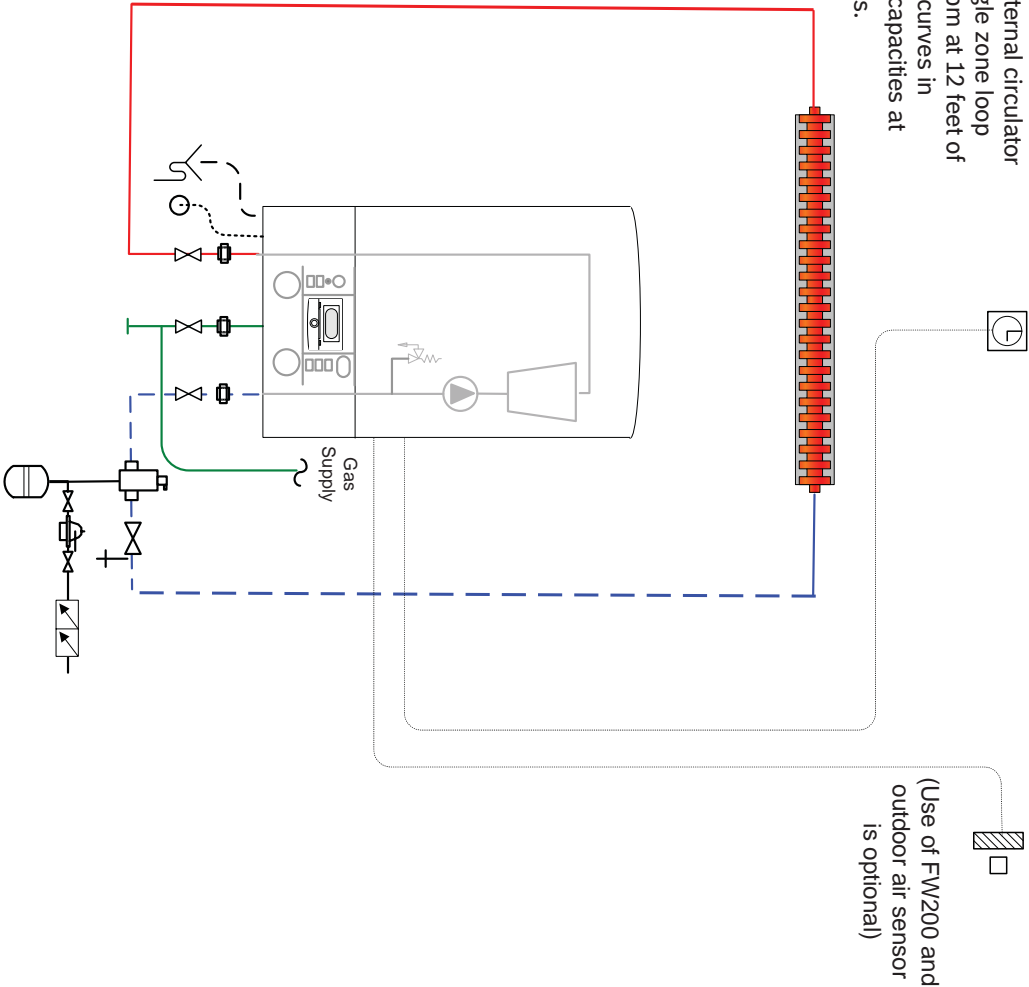

System #5


Heatronic Internal Wiring

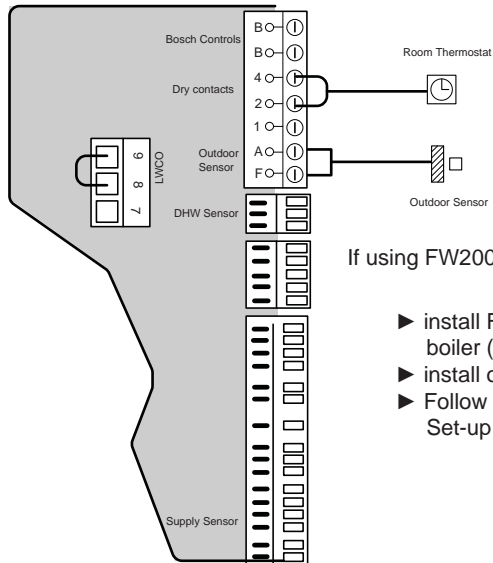

If using FW200 (Optional):

- install FW200 on front of boiler (see manual)
- install outdoor air sensor
- Follow FW200 Quick Set-up guide in Appendix C

Note: For Low Water Cutoff Wiring see Appendix D of this manual

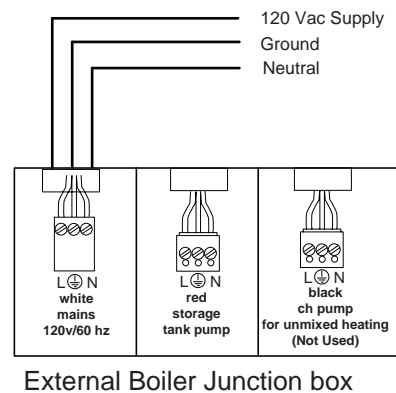

Wiring:

Low Voltage


- Remove factory jumper from terminal #2 & #4 inside Heatronic control and connect non-power robbing thermostat (dry contacts only)

Line Voltage

- Wire Main power supply (120 v) to White molex

Heatronic Settings:

Boiler Heating Dial	Typical supply temperatures	Application
1	approx. 95 °F (35 °C)	Frost protection
2	approx. 109 °F (43 °C)	
3	approx. 122 °F (50 °C)	Radiant floor heating
4	approx. 140 °F (60 °C)	Panel radiator system
5	approx. 153 °F (67 °C)	Cast Iron radiator system
6	approx. 167 °F (75 °C)	
max	Approx. 194 °F (90°C)	Baseboard & convector system

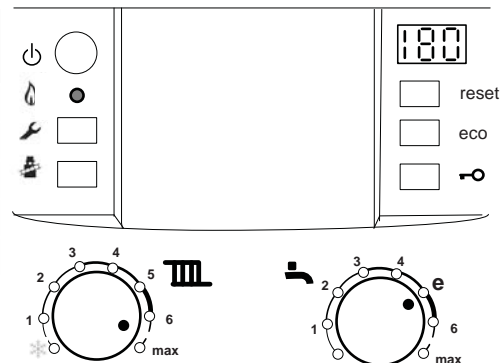

System # 6


Single Zone

Heat only wall boiler


Baseboard

NSC Controls


PRV
Relief piping




Purge
Drain




Comfort
Room
Control




Condensate
drain




Relief valve &
pressure gauge




Back-flow
preventer




Isolation
valve




Outdoor
air sensor




Baseboard




Expansion
Tank



Auto-Fill




Air
Eliminator



DISCLAIMER: Application drawings in this manual are conceptual only and do not purport to address all design, installation, code, or safety considerations. The diagrams in this manual are for reference use by code officials, designers and licensed installers. It is expected that installers have adequate knowledge of national and local codes, as well as accepted industry practices, and are trained on equipment, procedures, and applications involved. Drawings are not to scale. Refer to the boiler, control and module installer manuals for additional detailed information.

Note:Greenstar Internal circulator can support a single zone loop not to exceed 4 gpm at 12 feet of head. See pump curves in manual for pump capacities at alternate flow rates.

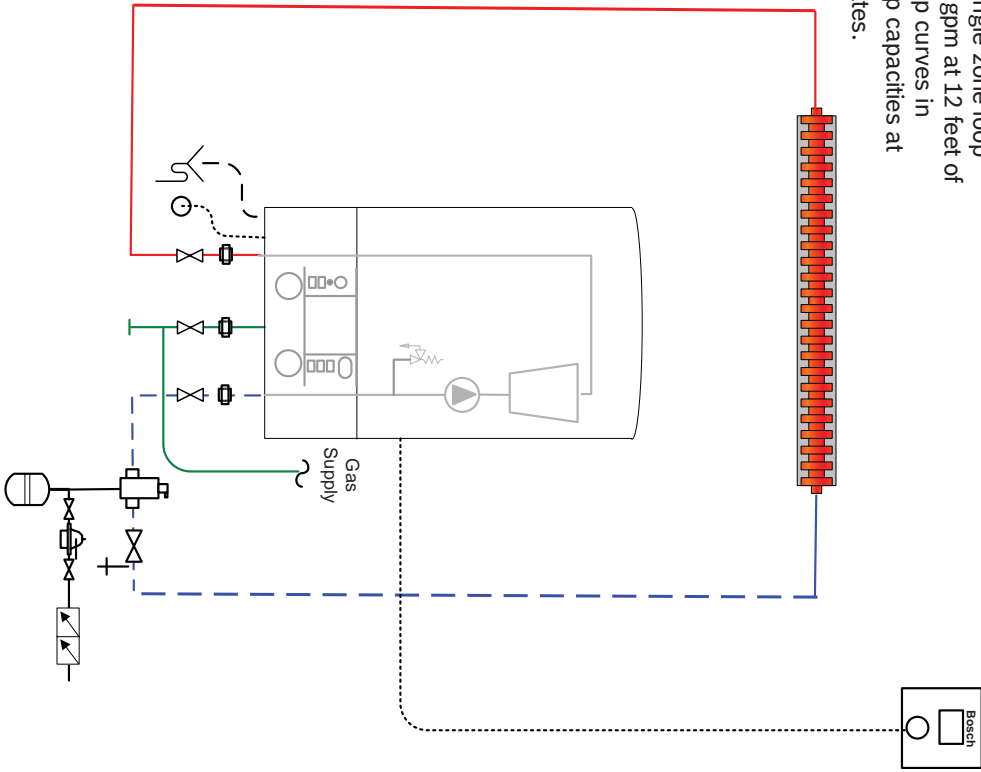

Created

TK

02/20/15

Released

Changed

Bases

No.

State


Bosch

Data subject to change


Bosch Thermotechnology Corp.

System #6

Heatronic Internal Wiring

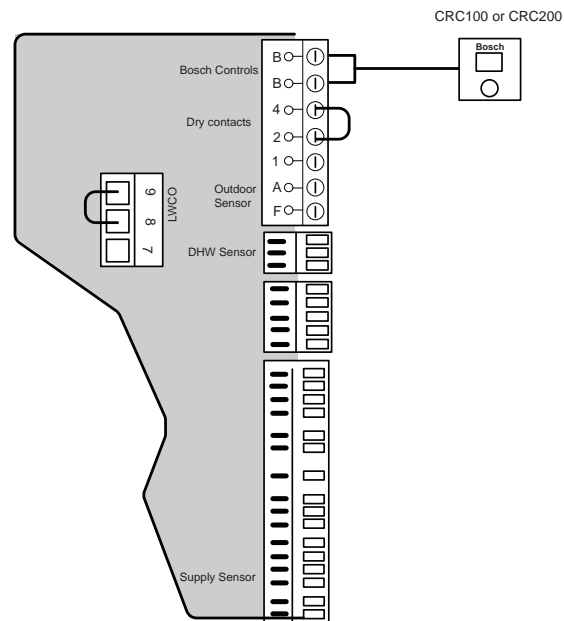

Note: For Low Water Cutoff Wiring see Appendix D of this manual

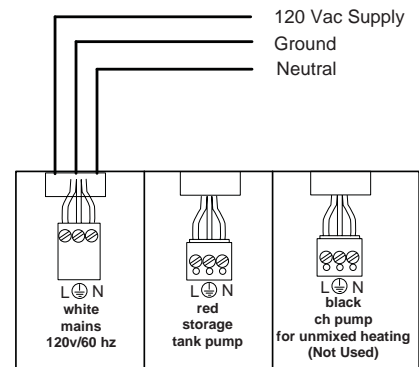

External Boiler Junction box

Wiring:


Low Voltage


- Wire Comfort Room Controller (CRC100 or CRC200) to Terminals B B of Heatronic control
- See Appendix A for Room Controller Settings

Line Voltage

- Wire Main power supply (120 v) to White molex

Heatronic Settings:

Boiler Heating Dial 	Typical supply temperatures	Application
1	approx. 95 °F (35 °C)	Frost protection
2	approx. 109 °F (43 °C)	
3	approx. 122 °F (50 °C)	Radiant floor heating
4	approx. 140 °F (60 °C)	Panel radiator system
5	approx. 153 °F (67 °C)	Cast Iron radiator system
6	approx. 167 °F (75 °C)	
max	Approx. 194 °F (90°C)	Baseboard & convector system

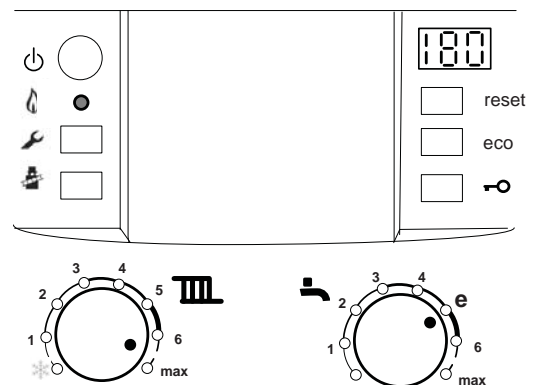

System # 7

Single Zone













Heat only floor boiler

Baseboard


On/Off Thermostat

DISCLAIMER: Application drawings in this manual are conceptual only and do not purport to address all design, installation, code, or safety considerations. The diagrams in this manual are for reference use by code officials, designers and licensed installers. It is expected that installers have adequate knowledge of national and local codes, as well as accepted industry practices, and are trained on equipment, procedures, and applications involved. Drawings are not to scale. Refer to the boiler, control and module installer manuals for additional detailed information.


Created	
Released	
Changed	
Bases	
No.	.
State	
Bosch	

	PRV Relief piping
	Purge Drain
	Room Thermostat
	Condensate drain
	Relief valve & pressure gauge
	Back-flow preventer
	Isolation valve
	Outdoor air sensor
	Baseboard
	Expansion Tank
	Auto-Fill
	Air Eliminator

Note: Greenstar Internal circulator can support a single zone loop not to exceed 4 gpm at 12 feet of head. See pump curves in manual for pump capacities at alternate flow rates.

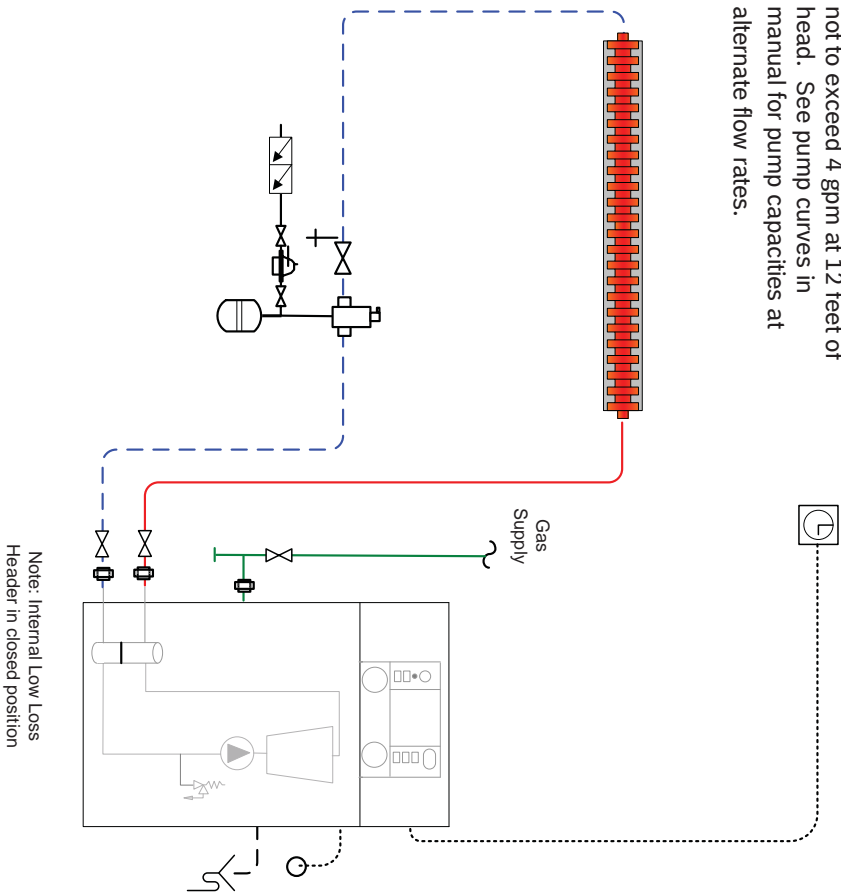

System #7

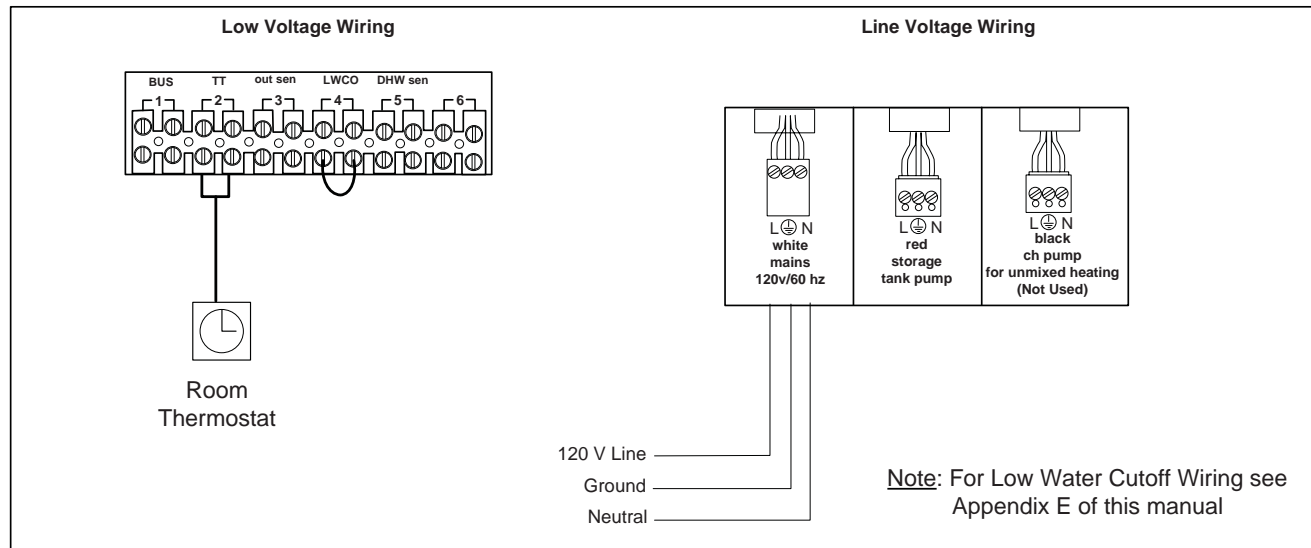
**Wiring:****Low Voltage**


- Remove factory jumper from terminal #2 and connect non-power robbing thermostat (dry contacts only) to terminal #2

Line Voltage

- Wire Main power supply (120 v) to White molex

Heatronic Settings:

Boiler Heating Dial 	Typical supply temperatures	Application
1	approx. 95 °F (35 °C)	Frost protection
2	approx. 109 °F (43 °C)	
3	approx. 122 °F (50 °C)	Radiant floor heating
4	approx. 140 °F (60 °C)	Panel radiator system
5	approx. 153 °F (67 °C)	Cast Iron radiator system
6	approx. 167 °F (75 °C)	
max	Approx. 194 °F (90 °C)	Baseboard & convector system

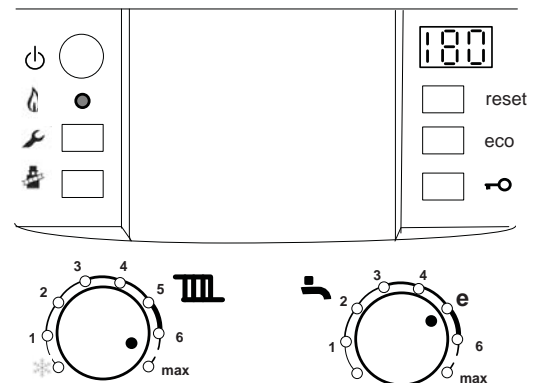

System # 8

Single Zone













Heat only floor boiler

Baseboard


NSC Controls

DISCLAIMER: Application drawings in this manual are conceptual only and do not purport to address all design, installation, code, or safety considerations. The diagrams in this manual are for reference use by code officials, designers and licensed installers. It is expected that installers have adequate knowledge of national and local codes, as well as accepted industry practices, and are trained on equipment, procedures, and applications involved. Drawings are not to scale. Refer to the boiler, control and module installer manuals for additional detailed information.


Created	
Released	
Changed	
Bases	
No.	
State	
Bosch	

	PRV Relief piping
	Purge Drain
	Room Thermostat
	Condensate drain
	Relief valve & pressure gauge
	Back-flow preventer
	Isolation valve
	Outdoor air sensor
	Baseboard
	Expansion Tank
	Auto-Fill
	Air Eliminator

Note:Greenstar Internal circulator can support a single zone loop not to exceed 4 gpm at 12 feet of head. See pump curves in manual for pump capacities at alternate flow rates.

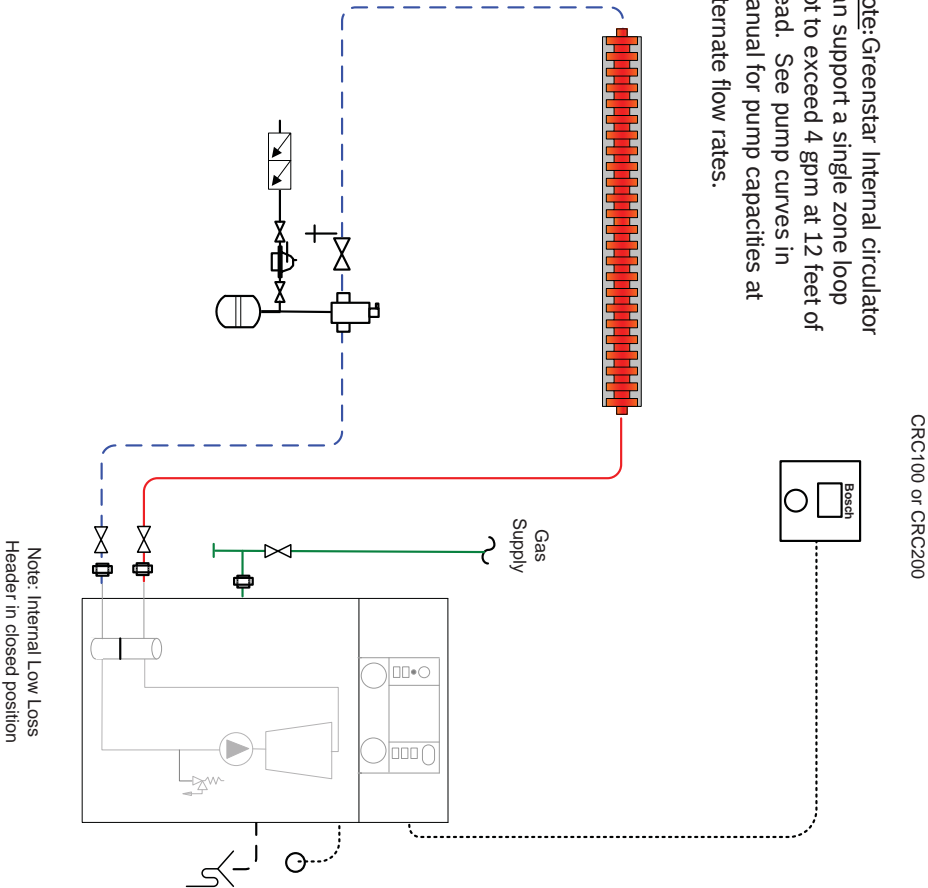

System #8

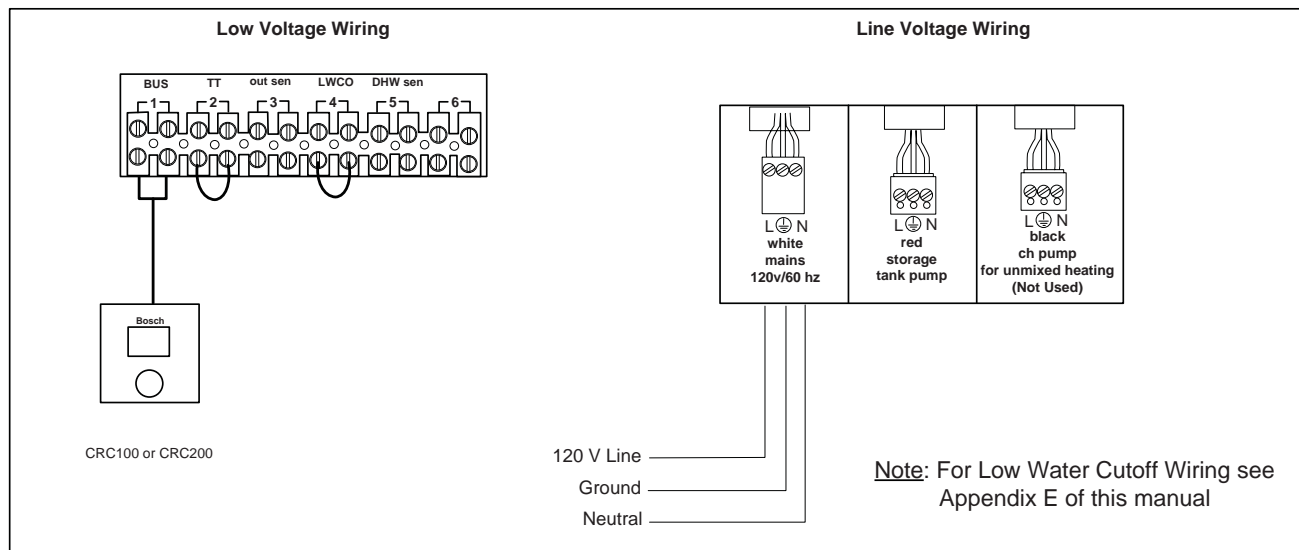

Wiring:


Low Voltage


- Wire Comfort Room Controller (CRC100 or CRC200) to Terminal # 1 on back of Greenstar FS Boiler
- See Appendix A for Room Controller Settings

Line Voltage

- Wire Main power supply (120 v) to White molex

Heatronic Settings:

Boiler Heating Dial 	Typical supply temperatures	Application
1	approx. 95 °F (35 °C)	Frost protection
2	approx. 109 °F (43 °C)	
3	approx. 122 °F (50 °C)	Radiant floor heating
4	approx. 140 °F (60 °C)	Panel radiator system
5	approx. 153 °F (67 °C)	Cast Iron radiator system
6	approx. 167 °F (75 °C)	
max	Approx. 194 °F (90 °C)	Baseboard & convector system

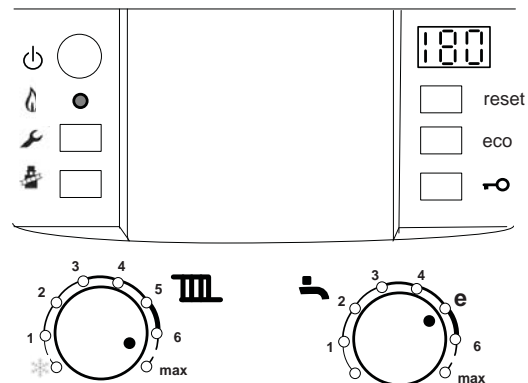

System # 9

Multi Zone

Combi wall boiler

Circulators

Zone Relay

DISCLAIMER: Application drawings in this manual are conceptual only and do not purport to address all design, installation, code, or safety considerations. The diagrams in this manual are for reference use by code officials, designers and licensed installers. It is expected that installers have adequate knowledge of national and local codes, as well as accepted industry practices, and are trained on equipment, procedures, and applications involved. Drawings are not to scale. Refer to the boiler, control and module installer manuals for additional detailed information.


	FW200
	Purge Drain
	Heating zone
	Auto-Fill
	Air Eliminator
	Flow Check
	Condensate drain
	Room Thermostat
	Expansion Tank
	PRV Relief Piping
	Back-flow preventer
	Shut-off valve
	Circulator
	Supply Sensor
	Outdoor Sensor

Note: Larger heating systems may require an additional expansion tank external to the boiler – see manual for details.

Note: See Appendix B for Primary/Secondary piping requirements

System # 9


Heatronic Internal Wiring

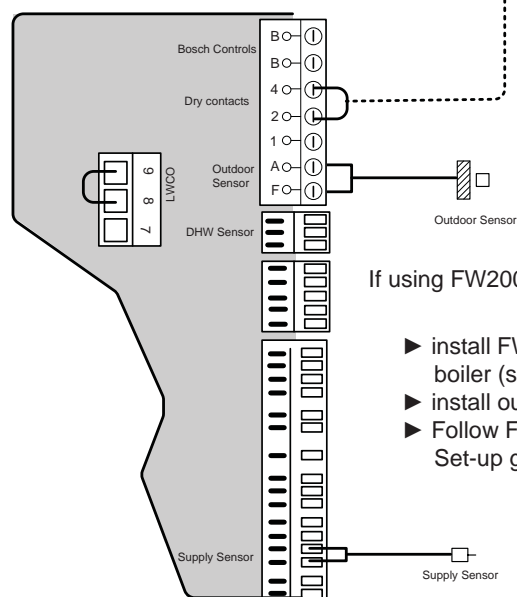

If using FW200 (Optional):

- ▶ install FW200 on front of boiler (see manual)
- ▶ install outdoor air sensor
- ▶ Follow FW200 Quick Set-up guide in Appendix C

Note: For Low Water Cutoff Wiring see Appendix D of this manual

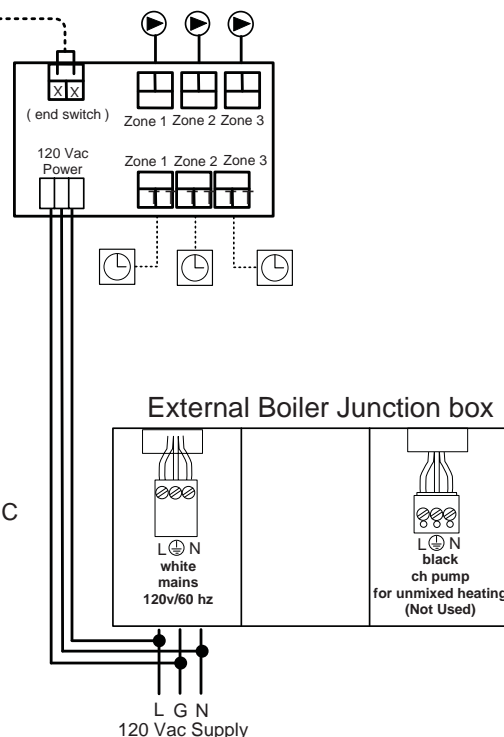

Wiring:


Low Voltage


- ▶ Remove factory jumper from terminal #2 & #4 and connect to End Switch of Multi-Zone relay (dry contacts only)


Line Voltage

- ▶ Wire Main power supply (120 v) to White molex of Boiler external junction box
- ▶ Wire 120 Vac power supply to zone relay

Heatronic Settings:





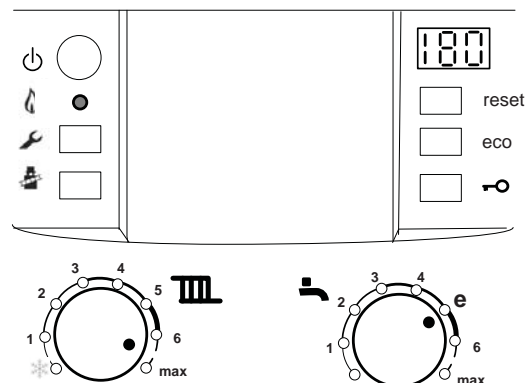










Boiler Heating Dial 	Typical supply temperatures	Application
1	approx. 95 °F (35 °C)	Frost protection
2	approx. 109 °F (43 °C)	
3	approx. 122 °F (50 °C)	Radiant floor heating
4	approx. 140 °F (60 °C)	Panel radiator system
5	approx. 153 °F (67 °C)	Cast Iron radiator system
6	approx. 167 °F (75 °C)	
max	Approx. 194 °F (90 °C)	Baseboard & convector system


DHW thermostat 	Typical DHW temperatures
min	approx. 59 °F (15 °C)
e	approx. 131 °F (55 °C)
max	approx. 158 °F (70 °C)



Multi Zone
Combi wall boiler
Circulators
NSC Controls

DISCLAIMER: Application drawings in this manual are conceptual only and do not purport to address all design, installation, code or safety considerations. The diagrams in this manual are for reference use by code officials, designers and licensed installers. It is expected that installers have adequate knowledge of national and local codes, as well as accepted industry practices, and are trained on equipment, procedures, and applications involved. Drawings are not to scale. Refer to the boiler, control and module installer manuals for additional detailed information.


	Comfort Zone Manager (CZM100)
	Purge Drain
	Heating zone
	Auto-Fill
	Air Eliminator
	Flow Check
	Condensate drain
	Room Thermostat
	Expansion Tank
	PRV Relief Piping
	Back-flow preventer
	Shut-off valve
	Circulator
	Supply Sensor
	Comfort Room Controller

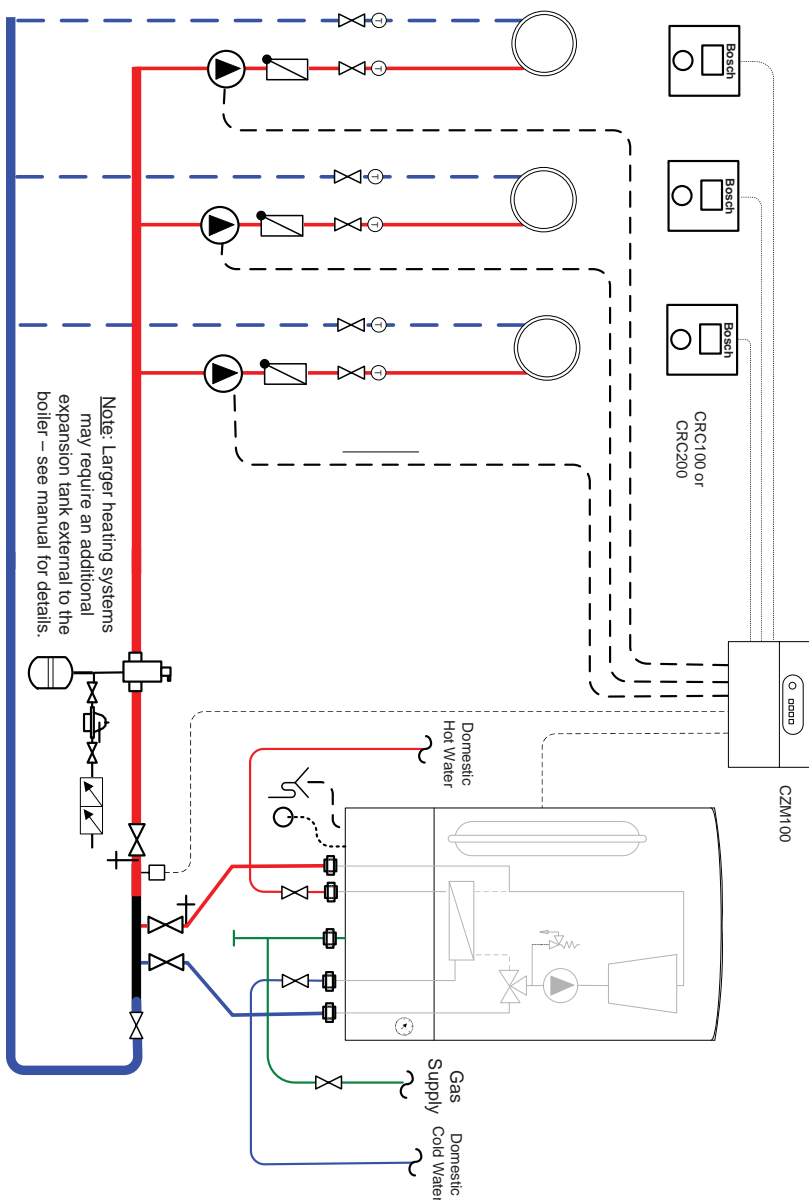


Note: See Appendix B for Primary/Secondary piping requirements

System #10

Heatronic Internal Wiring

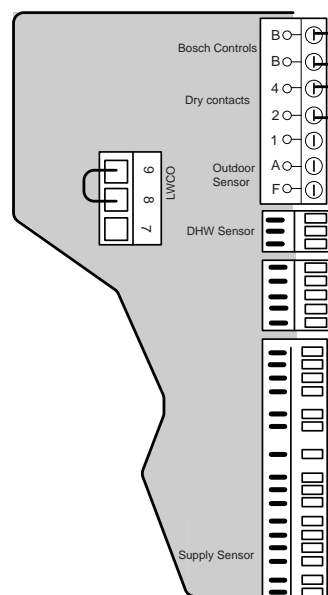

Note: For Low Water Cutoff Wiring see Appendix D of this manual

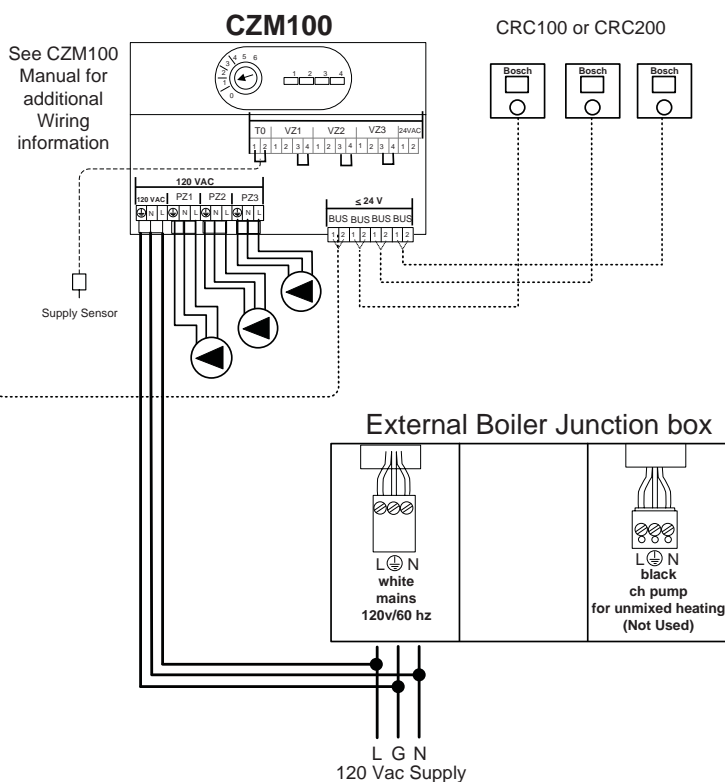

Wiring:


Low Voltage


- ▶ Wire BUS terminal of CZM100 to Terminal BB of Greenstar boiler
- ▶ Wire CRC controllers to BUS terminals of CZM100
- ▶ See Appendix A for Room Controller Settings
- ▶ Wire Supply Sensor to "TO" connection on CZM100


Line Voltage

- ▶ Wire Main power supply (120 v) to White molex of Boiler (external junction box) and to 120 VAC input of CZM100
- ▶ Wire 120 VAC outputs of PZ1, PZ2 and PZ3 of CZM100 to Zone Circulators

Heatronic Settings:

Boiler Heating Dial 	Typical supply temperatures	Application
1	approx. 95 °F (35 °C)	Frost protection
2	approx. 109 °F (43 °C)	
3	approx. 122 °F (50 °C)	Radiant floor heating
4	approx. 140 °F (60 °C)	Panel radiator system
5	approx. 153 °F (67 °C)	Cast Iron radiator system
6	approx. 167 °F (75 °C)	
max	Approx. 194 °F (90°C)	Baseboard & convector system

DHW thermostat 	Typical DHW temperatures
min	approx. 59 °F (15 °C)
e	approx. 131 °F (55 °C)
max	approx. 158 °F (70 °C)

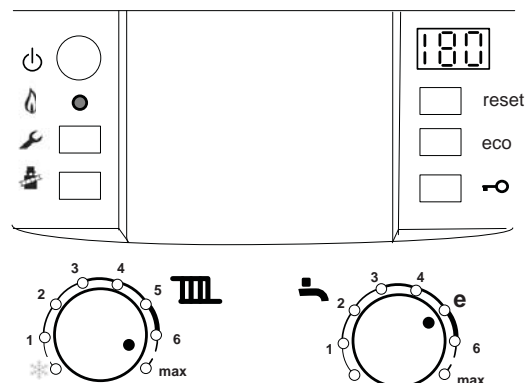

System # 11

Multi Zone

Combi floor boiler

Circulators

Zone Relay

+

Purge Drain

Heating zone

Auto-Fill

Air Eliminator

Flow Check

Condensate drain

Room Thermostat

Expansion Tank

PRV Relief Piping

Backflow preventer

Shut-off valve

Circulator

DISCLAIMER: Application drawings in this manual are conceptual only and do not purport to address all design, installation, code, or safety considerations. The diagrams in this manual are for reference use by code officials, designers and licensed installers. It is expected that installers have adequate knowledge of national and local codes, as well as accepted industry practices, and are trained on equipment, procedures, and applications involved. Drawings are not to scale. Refer to the boiler, control and module installer manuals for additional detailed information.

...

Note: Internal Low Loss Header in **open** position


Note: Larger heating systems may require an additional expansion tank external to the boiler — see manual for details.

...

Data subject to change

Bosch Thermotechnology Corp.

System #11

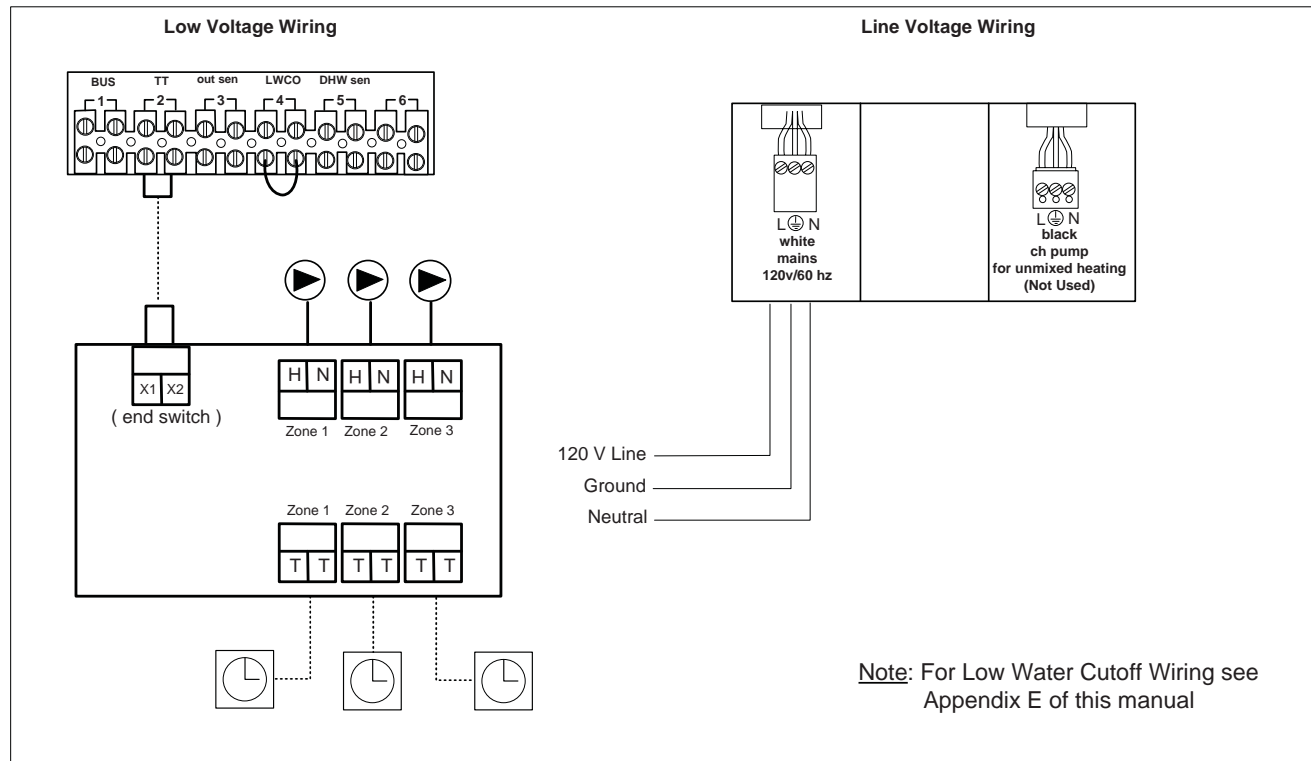

Wiring:


Low Voltage


- Remove factory jumper from terminal #2 and connect End Switch of Multi-Zone relay (dry contacts only) to terminal #2


Line Voltage

- Wire Main power supply (120 v) to White molex of Boiler

Heatronic Settings:

Boiler Heating Dial 	Typical supply temperatures	Application
1	approx. 95 °F (35 °C)	Frost protection
2	approx. 109 °F (43 °C)	
3	approx. 122 °F (50 °C)	Radiant floor heating
4	approx. 140 °F (60 °C)	Panel radiator system
5	approx. 153 °F (67 °C)	Cast Iron radiator system
6	approx. 167 °F (75 °C)	
max	Approx. 194 °F (90 °C)	Baseboard & convector system

DHW thermostat 	Typical DHW temperatures
min	approx. 104 °F (40 °C)
e	approx. 122 °F (50 °C)
max	approx. 140 °F (60 °C)

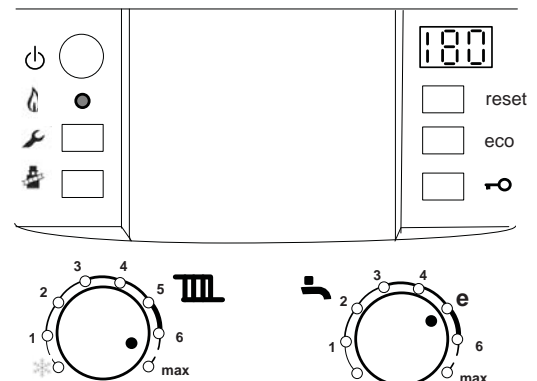

System #12

Multi Zone

Combi floor boiler

Circulators

NSC Controls


DISCLAIMER: Application drawings in this manual are conceptual only and do not purport to address all design, installation, code, or safety considerations. The diagrams in this manual are for reference use by code officials, designers and licensed installers. It is expected that installers have adequate knowledge of national and local codes, as well as accepted industry practices, and are trained on equipment, procedures, and applications involved. Drawings are not to scale. Refer to the boiler, control and module installer manuals for additional detailed information.

Created			Combi floor boiler
Released			Purge Drain
Changed			Heating zone
Bases			Auto-Fill
			Air Eliminator
			Flow Check
			Condensate drain
			Comfort Room Controller
			Expansion Tank
			PRV Relief Piping
			Back-flow preventer
			Shut-off valve
			Circulator

Note: Internal Low Loss Header in **open** position

Note: Larger heating systems may require an additional expansion tank external to the boiler – see manual for details.

System #12

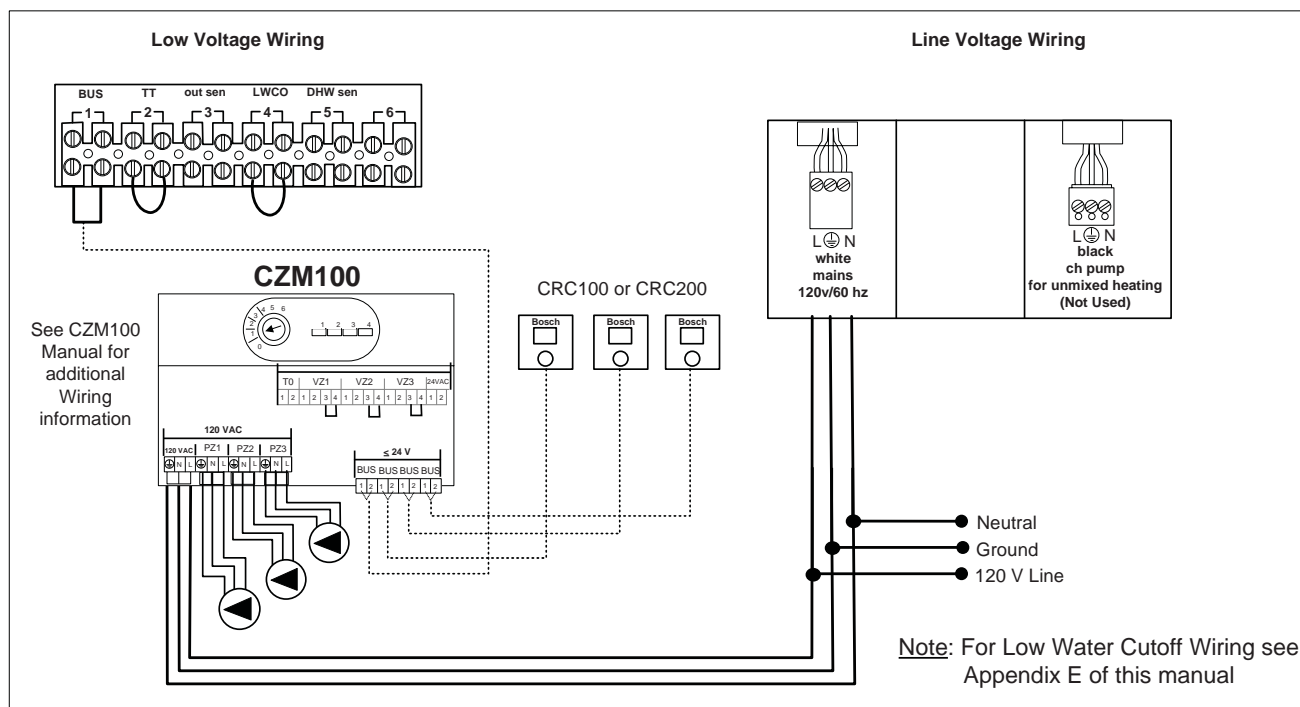
**Wiring:****Low Voltage**


- Wire BUS terminal of CZM100 to Terminal #1 of Greenstar FS boiler
- Wire CRC controllers to BUS terminals of CZM100
- See Appendix A for Room Controller Settings


Line Voltage

- Wire Main power supply (120 v) to White molex of Boiler and to 120 VAC input of CZM100
- Wire 120 VAC outputs of PZ1, PZ2 and PZ3 to Zone Circulators








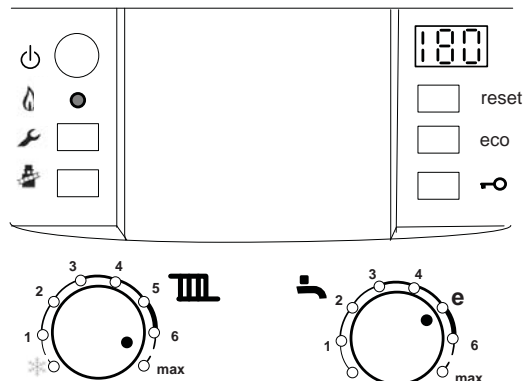








Heatronic Settings:


Boiler Heating Dial 	Typical supply temperatures	Application
1	approx. 95 °F (35 °C)	Frost protection
2	approx. 109 °F (43 °C)	
3	approx. 122 °F (50 °C)	Radiant floor heating
4	approx. 140 °F (60 °C)	Panel radiator system
5	approx. 153 °F (67 °C)	Cast Iron radiator system
6	approx. 167 °F (75 °C)	
max	Approx. 194 °F (90°C)	Baseboard & convector system

DHW thermostat 	Typical DHW temperatures
min	approx. 104 °F (40 °C)
e	approx. 122 °F (50 °C)
max	approx. 140 °F (60 °C)




DISCLAIMER: Application drawings in this manual are conceptual only and do not purport to address all design, installation, code, or safety considerations. The diagrams in this manual are for reference use by code officials, designers and licensed installers. It is expected that installers have adequate knowledge of national and local codes, as well as accepted industry practices, and are trained on equipment, procedures, and applications involved. Drawings are not to scale. Refer to the boiler, control and module installer manuals for additional detailed information.

<h1>System # 13</h1> <h2>Multi Zone</h2> <h3>Heat only wall boiler</h3> <h3>Circulators</h3> <h3>Indirect Tank</h3> <h3>Zone Relay</h3>		
		FW200
		DHW Thermostor
		Purge Drain
		Heating zone
		Auto-Fill
		Air Eliminator
		Flow Check
		Condensate drain
		Room Thermostat
		Expansion Tank
		PRV Relier Piping
		Back-flow preventer
		Shut-off Valve
		Circulator
		Supply Sensor
		Outdoor Sensor

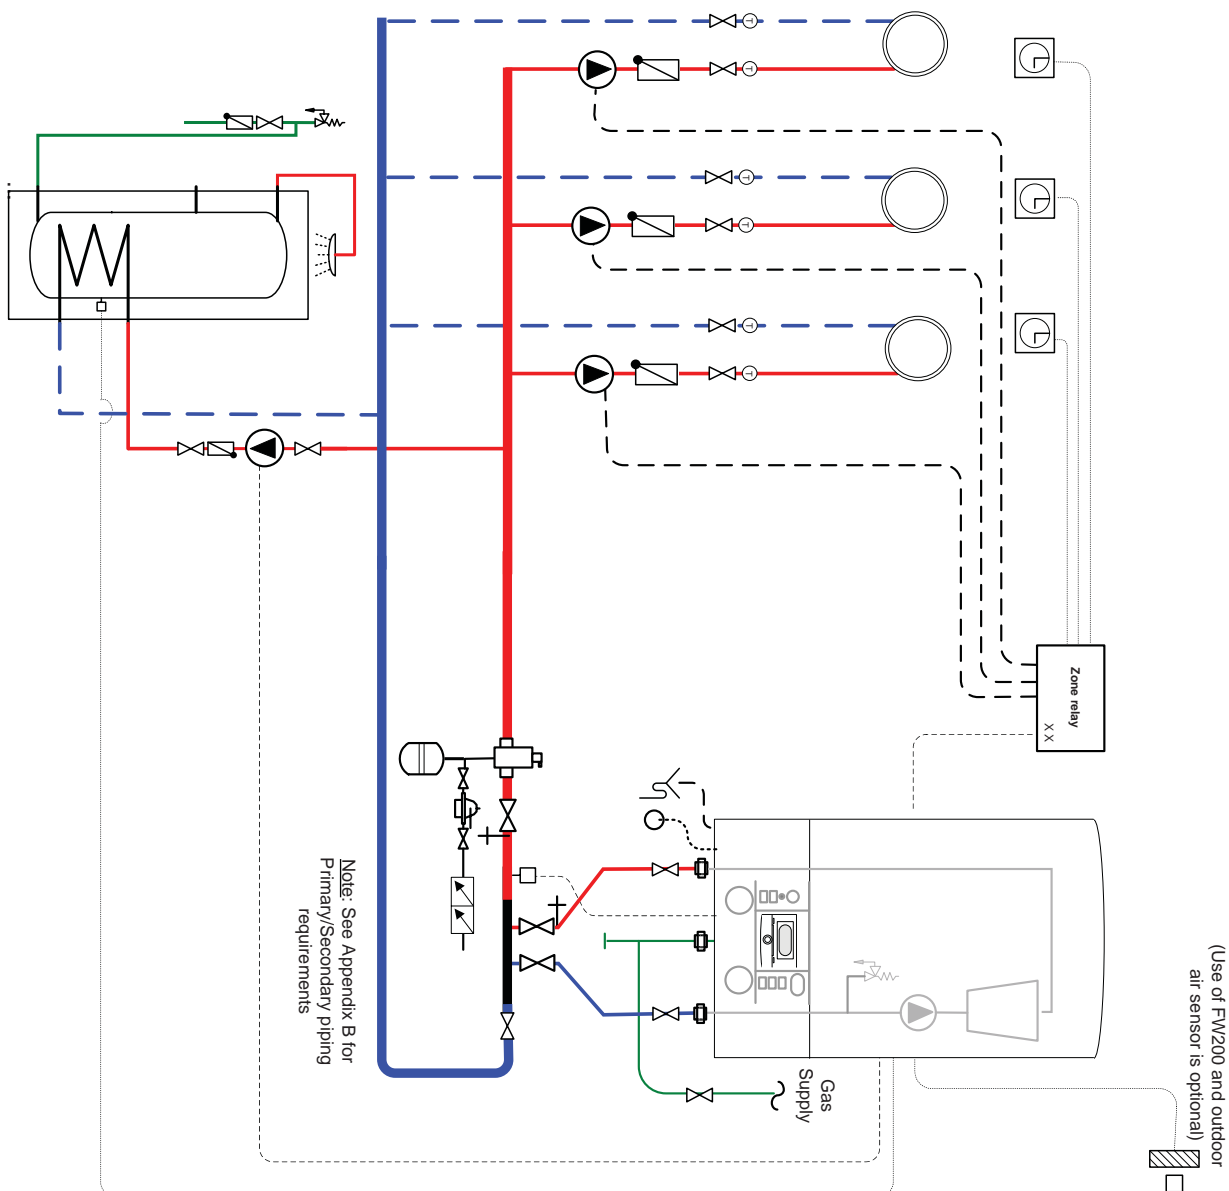


System # 13

Heatronic Internal Wiring

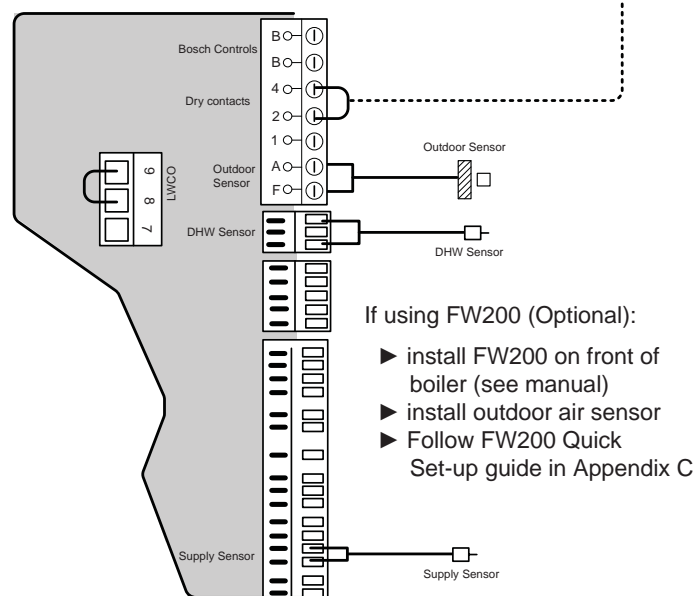

Note: For Low Water Cutoff Wiring see Appendix D of this manual

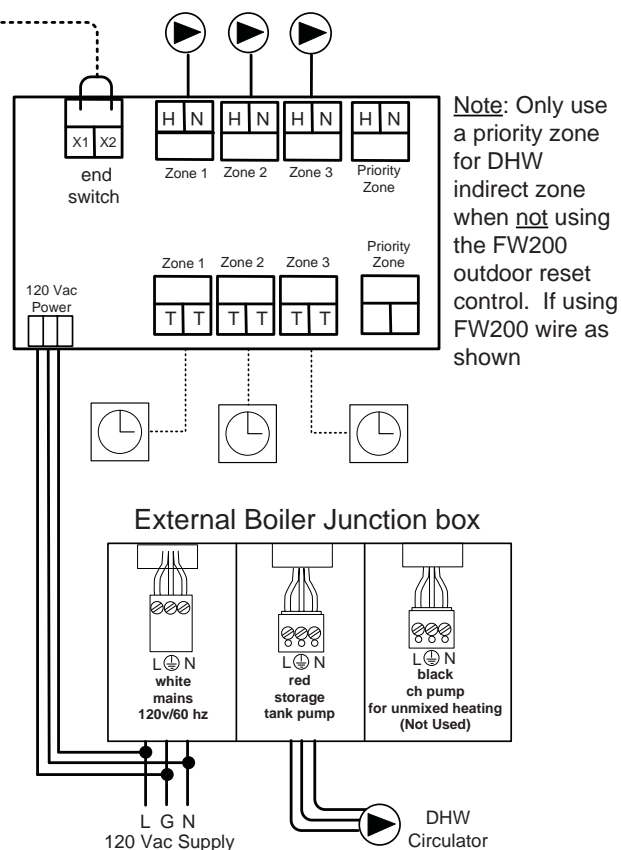

Wiring:

Low Voltage

- ▶ Remove factory jumper from terminal #2 & #4 and connect to End Switch of Multi-Zone relay (dry contacts only)


Line Voltage

- ▶ Wire Main power supply (120 v) to White molex of Boiler (external junction box)
- ▶ Wire 120 Vac power supply to zone relay

Heatronic Settings:

Boiler Heating Dial	Typical supply temperatures	Application
1	approx. 95 °F (35 °C)	Frost protection
2	approx. 109 °F (43 °C)	
3	approx. 122 °F (50 °C)	Radiant floor heating
4	approx. 140 °F (60 °C)	Panel radiator system
5	approx. 153 °F (67 °C)	Cast Iron radiator system
6	approx. 167 °F (75 °C)	
max	Approx. 194 °F (90°C)	Baseboard & convector system

DHW thermostat	Typical DHW temperatures
min	approx. 59 °F (15 °C)
e	approx. 131 °F (55 °C)
max	approx. 158 °F (70 °C)

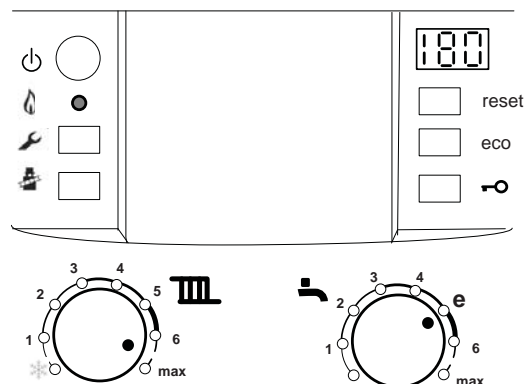
















Multi Zone
Heat only wall boiler
Circulators
Indirect Tank
NSC Controls


...

DISCLAIMER: Application drawings in this manual are conceptual only and do not purport to address all design, installation, code, or safety considerations. The diagrams in this manual are for reference use by code officials, designers and licensed installers. It is expected that installers have adequate knowledge of national and local codes, as well as accepted industry practices, and are trained on equipment, procedures, and applications involved. Drawings are not to scale. Refer to the boiler, control and module installer manuals for additional detailed information.

Created	
Released	
Changed	
Bases	
No.	
Date	

Bosch


	Comfort Zone Manager (CZM100)
	Purge Drain
	Heating zone
	Auto-Fill
	Air Eliminator
	Flow Check
	Condensate drain
	Room Thermostat
	Expansion Tank
	PRV Relief Piping
	Back-flow preventer
	Shut-off valve
	Circulator
	Supply Sensor
	Comfort Room Controller

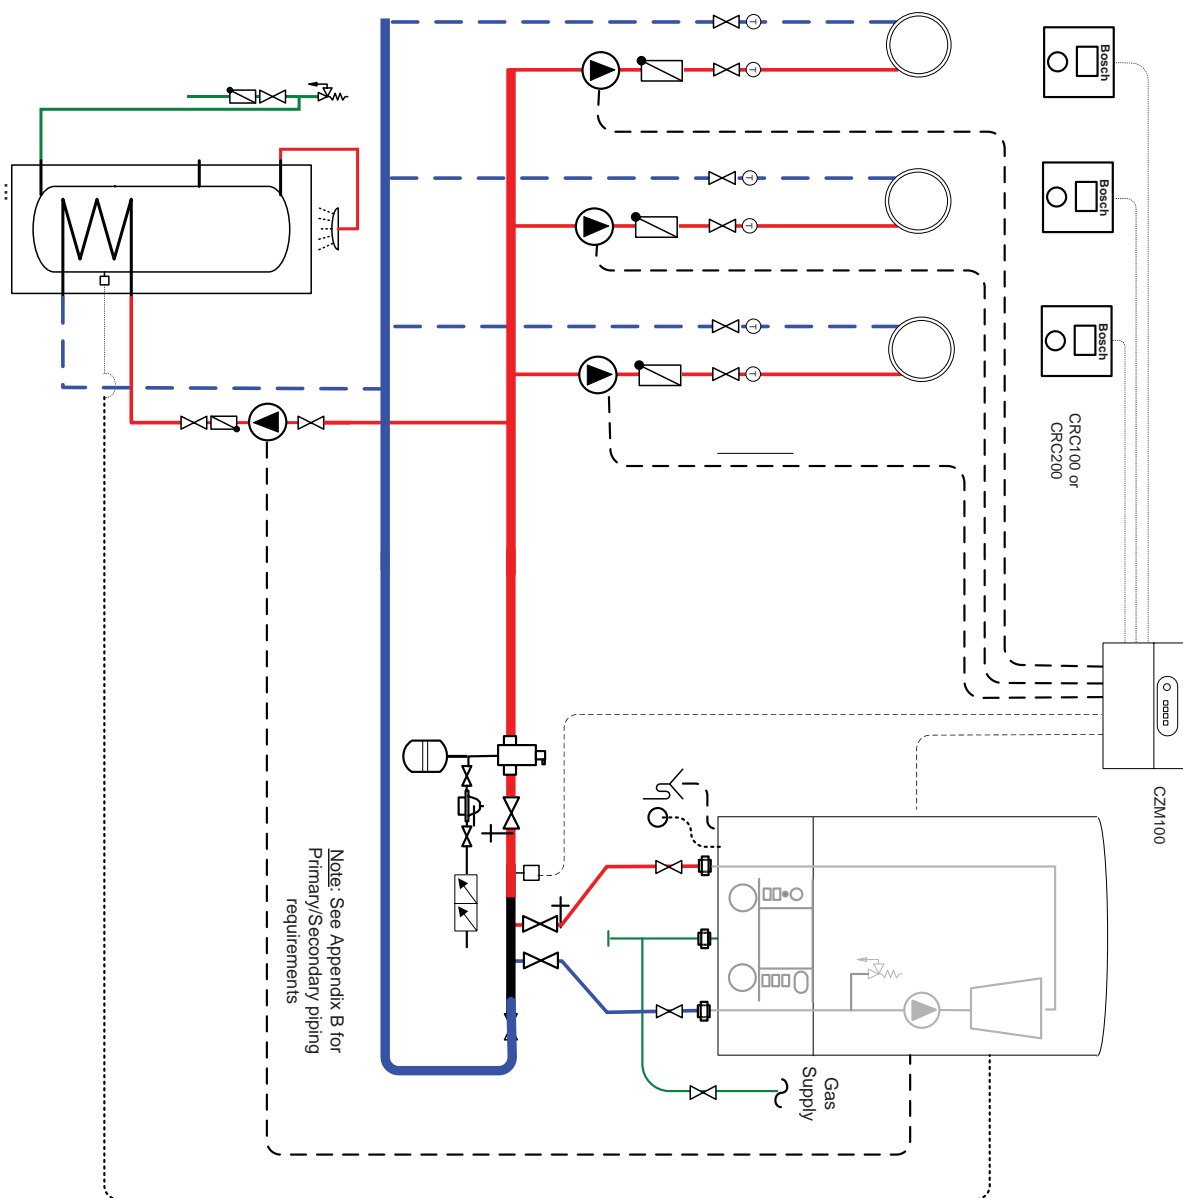

Note: See Appendix B for Primary/Secondary piping requirements


System #14

Heatronic Internal Wiring

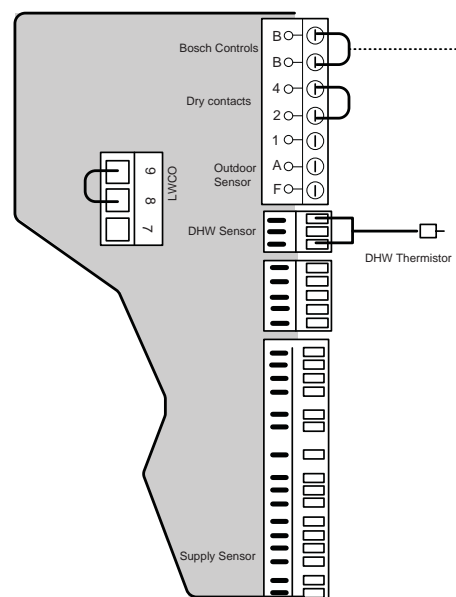

Note: For Low Water Cutoff Wiring see Appendix D of this manual

See CZM100 Manual for additional Wiring information

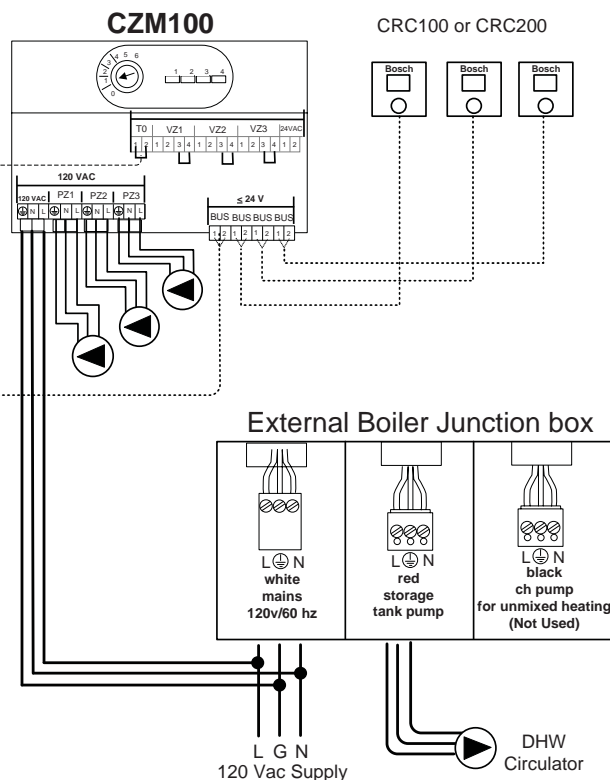

Wiring:

Low Voltage

- ▶ Wire BUS terminal of CZM100 to Terminal BB of Greenstar boiler
- ▶ Wire CRC controllers to BUS terminals of CZM100 (See Appendix A for Room Controller Settings)
- ▶ Wire Greenstar Tank thermistor sensor to blue molex adaptor in Greenstar boiler wire harness
- ▶ Wire Supply Sensor to "TO" connection of CZM100


Line Voltage

- ▶ Wire Main power supply (120 v) to White molex of Boiler (external junction box) and to 120 VAC input of CZM100
- ▶ Wire 120 VAC outputs of PZ1, PZ2 and PZ3 of CZM100 to Zone Circulators
- ▶ Wire 120 VAC of Red Molex to DHW Circulator

Heatronic Settings:

Boiler Heating Dial	Typical supply temperatures	Application
1	approx. 95 °F (35 °C)	Frost protection
2	approx. 109 °F (43 °C)	
3	approx. 122 °F (50 °C)	Radiant floor heating
4	approx. 140 °F (60 °C)	Panel radiator system
5	approx. 153 °F (67 °C)	Cast Iron radiator system
6	approx. 167 °F (75 °C)	
max	Approx. 194 °F (90 °C)	Baseboard & convector system

DHW thermostat	Typical DHW temperatures
min	approx. 59 °F (15 °C)
e	approx. 131 °F (55 °C)
max	approx. 158 °F (70 °C)

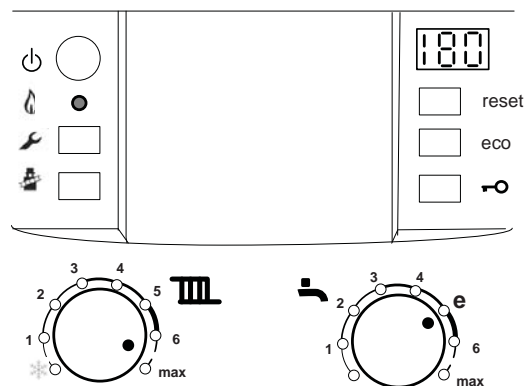

System # 15

Multi Zone

Heat only floor boiler

Circulators

Indirect Tank

Zone Relay

DISCLAIMER: Application drawings in this manual are conceptual only and do not purport to address all design, installation, code, or safety considerations. The diagrams in this manual are for reference use by code officials, designers and licensed installers. It is expected that installers have adequate knowledge of national and local codes, as well as accepted industry practices, and are trained on equipment, procedures, and applications involved. Drawings are not to scale. Refer to the boiler, control and module installer manuals for additional detailed information.


Created	
Released	
Changed	
Bases	
No.	
Date	

Bosch

+	Purge Drain
	DHW Adjuster
	Heating zone
	Auto-Fill
	Air Eliminator
	Flow Check
	Condensate drain
	Room Thermostat
	Expansion Tank
	PRV Relief Piping
	Back-flow preventer
	Shut-off valve
	Relief Valve
	Domestic Hot Water
	Circulator

Note: Internal Low Loss Header in **open** position

System #15

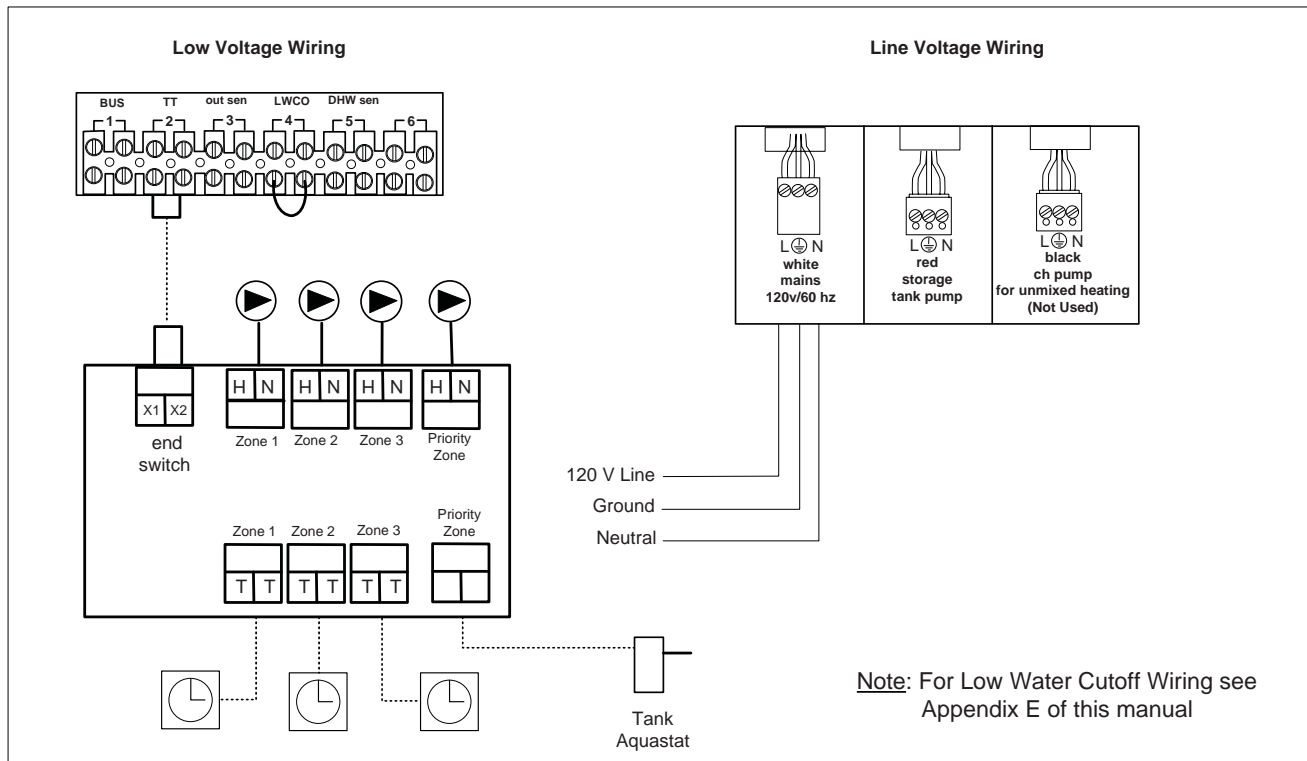
**Wiring:****Low Voltage**


- Remove factory jumper from terminal #2 and connect End Switch of Mult-Zone relay (dry contacts only) to terminal #2


Line Voltage

- Wire Main power supply (120 v) to White molex of Boiler

Heatronic Settings:

Boiler Heating Dial 	Typical supply temperatures	Application
1	approx. 95 °F (35 °C)	Frost protection
2	approx. 109 °F (43 °C)	
3	approx. 122 °F (50 °C)	Radiant floor heating
4	approx. 140 °F (60 °C)	Panel radiator system
5	approx. 153 °F (67 °C)	Cast Iron radiator system
6	approx. 167 °F (75 °C)	
max	Approx. 194 °F (90°C)	Baseboard & convector system



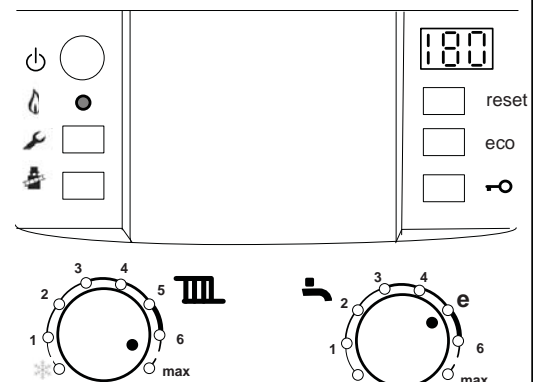













DHW thermostat 	Typical DHW temperatures
min	approx. 59 °F (15 °C)
e	approx. 131 °F (55 °C)
max	approx. 158 °F (70 °C)




Multi Zone
Heat only floor boiler
Circulators
Indirect Tank
NSC Controls


DISCLAIMER: Application drawings in this manual are conceptual only and do not purport to address all design, installation, code, or safety considerations. The diagrams in this manual are for reference use by code officials, designers and licensed installers. It is expected that installers have adequate knowledge of national and local codes, as well as accepted industry practices, and are trained on equipment, procedures, and applications involved. Drawings are not to scale. Refer to the boiler, control and module installer manuals for additional detailed information.

Created	
Released	
Changed	
Bases	
No.	
Date	

	Comfort Zone Manager (CZM100)
	Purge Drain
	DHW Sensor
	Heating zone
	Auto-Fill
	Air Eliminator
	Flow Check
	Condensate drain
	Comfort Room Controller
	Expansion Tank
	PRV Relief Piping
	Back-flow preventer
	Shut-off valve
	Relief Valve
	Domestic Hot Water
	Circulator

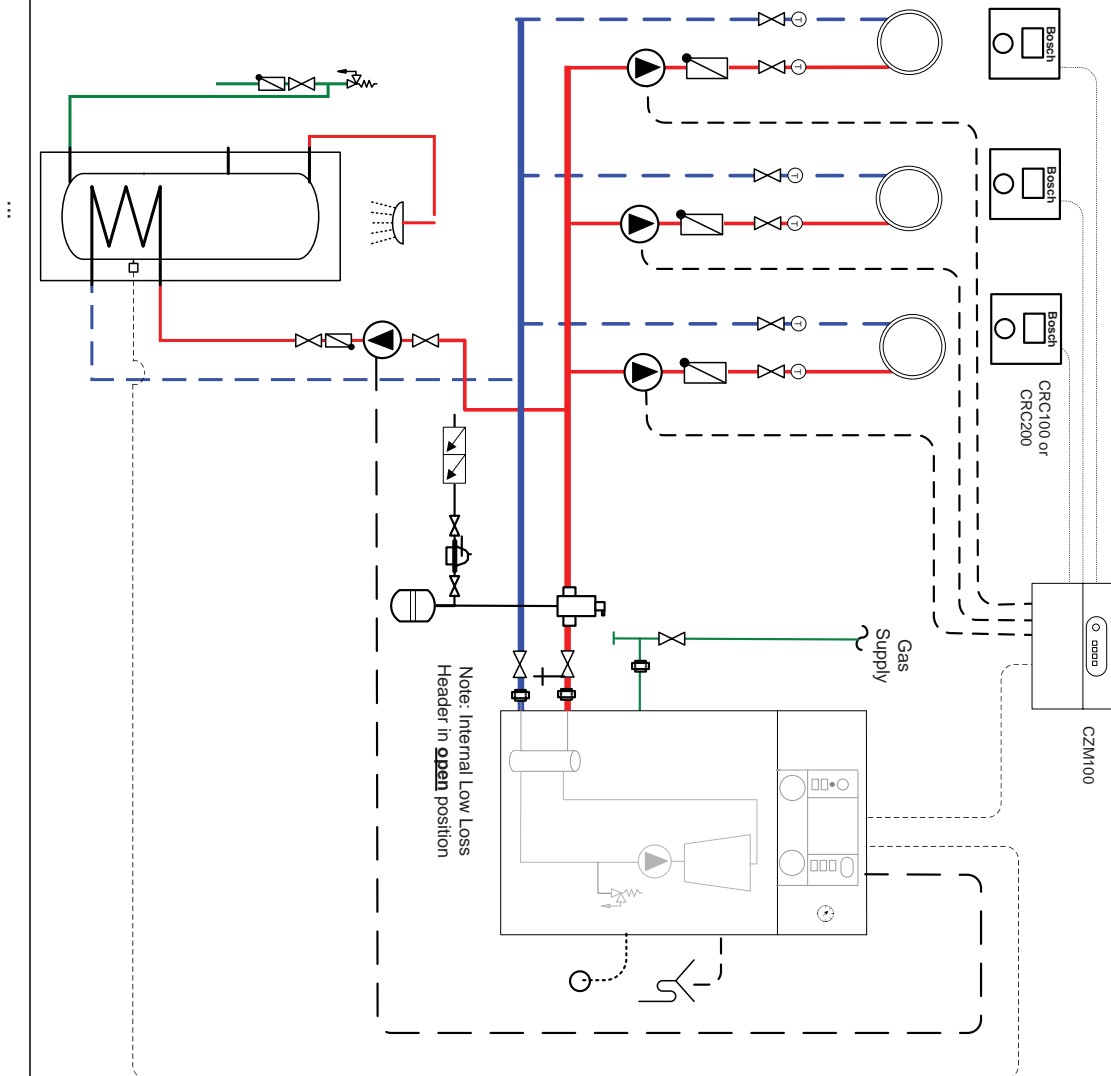

System #16

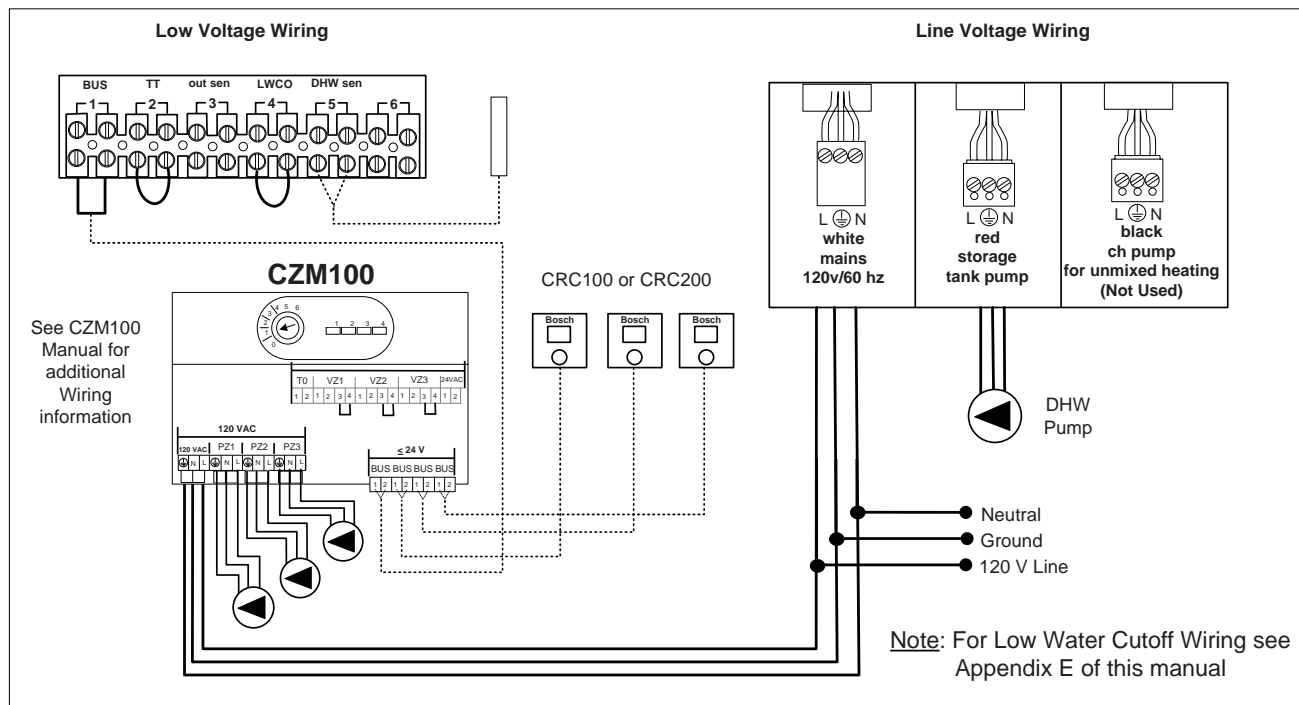

Wiring:


Low Voltage


- ▶ Wire BUS terminal of CZM100 to Terminal #1 of Greenstar FS boiler
- ▶ Wire CRC controllers to BUS terminals of CZM100
- ▶ Wire Greenstar Tank sensor to Terminal #5 of Greenstar FS boiler
- ▶ See Appendix A for Room Controller Settings


Line Voltage

- ▶ Wire Main power supply (120 v) to White molex of Boiler and to 120 VAC input of CZM100
- ▶ Wire 120 VAC outputs of PZ1, PZ2 and PZ3 to Zone Circulators
- ▶ Wire Red molex on back of Greenstar FS boiler to DHW indirect tank pump

Heatronic Settings:

Boiler Heating Dial 	Typical supply temperatures	Application
1	approx. 95 °F (35 °C)	Frost protection
2	approx. 109 °F (43 °C)	
3	approx. 122 °F (50 °C)	Radiant floor heating
4	approx. 140 °F (60 °C)	Panel radiator system
5	approx. 153 °F (67 °C)	Cast Iron radiator system
6	approx. 167 °F (75 °C)	
max	Approx. 194 °F (90 °C)	Baseboard & convactor system

DHW thermostat 	Typical DHW temperatures
min	approx. 59 °F (15 °C)
e	approx. 131 °F (55 °C)
max	approx. 158 °F (70 °C)

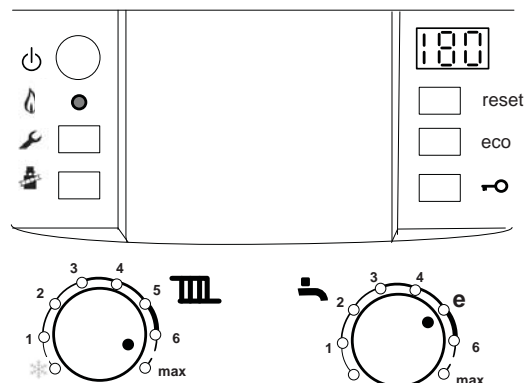

Multi Zone
Combi wall boiler
Zone Valves
Zone Relay

DISCLAIMER: Application drawings in this manual are conceptual only and do not purport to address all design, installation, code, or safety considerations. The diagrams in this manual are for reference use by code officials, designers and licensed installers. It is expected that installers have adequate knowledge of national and local codes, as well as accepted industry practices, and are trained on equipment, procedures, and applications involved. Drawings are not to scale. Refer to the boiler, control and module installer manuals for additional detailed information.

Diagram illustrating a heating system configuration with a zone valve and a zone relay.

The system includes a boiler, a zone valve, a zone relay, and a network of radiators.

Key Components and Connections:

- Boiler:** The central heating unit, connected to the zone valve and the zone relay.
- Zone Valve:** Controls the flow of water to the zone of radiators.
- Zone Relay:** Controls the zone valve.
- Radiators:** The heating units in the zone.
- Domestic Hot Water:** Connected to the boiler.
- Gas Supply:** Connected to the boiler.
- Domestic Cold Water:** Connected to the boiler.


Note: Larger heating systems may require an additional expansion tank external to the boiler – see manual for details.

Note: See Appendix B for Primary/Secondary piping requirements.

Optional: Use of FW200 and outdoor air sensor is optional.

System # 17

Heatronic Internal Wiring

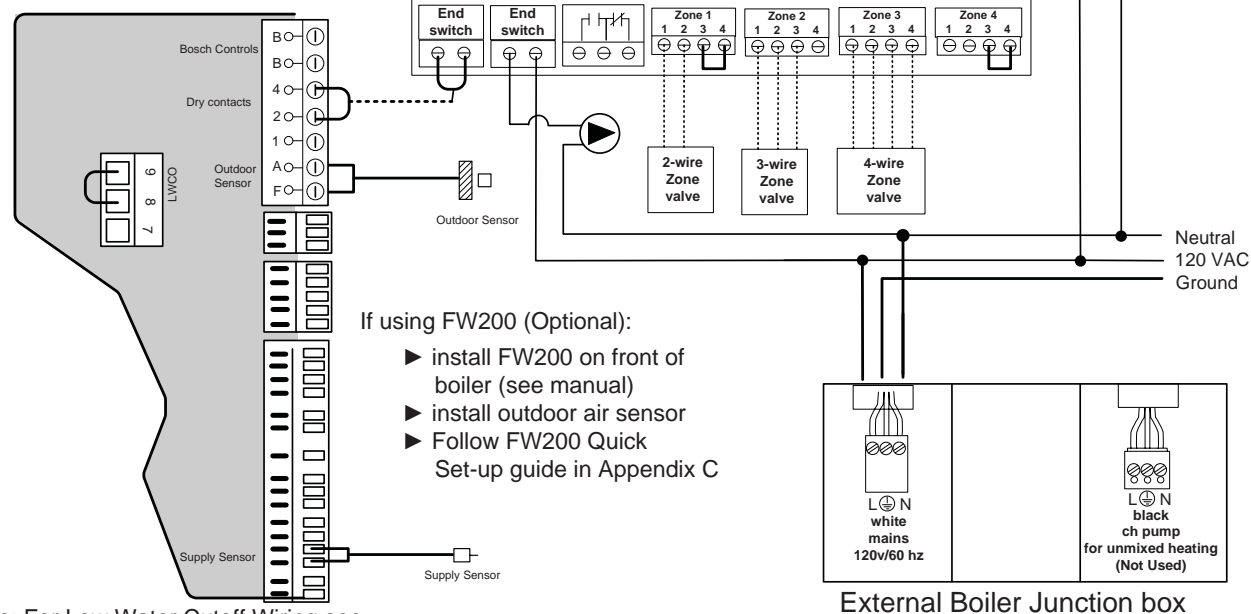

Note: For Low Water Cutoff Wiring see Appendix D of this manual

Wiring:

Low Voltage

- Remove factory jumper from terminal #2 & #4 and connect to End Switch of Multi-Zone relay (dry contacts only)


Line Voltage

- Wire Main power supply (120 v) to White molex of Boiler external junction box
- Wire 120 Vac power supply to zone relay

Heatronic Settings:

Boiler Heating Dial	Typical supply temperatures	Application
1	approx. 95 °F (35 °C)	Frost protection
2	approx. 109 °F (43 °C)	
3	approx. 122 °F (50 °C)	Radiant floor heating
4	approx. 140 °F (60 °C)	Panel radiator system
5	approx. 153 °F (67 °C)	Cast Iron radiator system
6	approx. 167 °F (75 °C)	
max	Approx. 194 °F (90 °C)	Baseboard & convector system

DHW thermostat	Typical DHW temperatures
min	approx. 104 °F (40 °C)
e	approx. 122 °F (50 °C)
max	approx. 140 °F (60 °C)

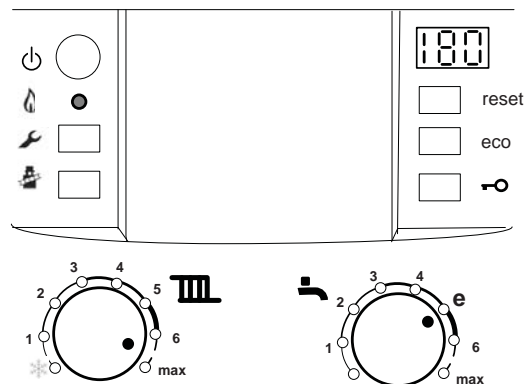

System # 18

Multi Zone

Combi wall boiler

Zone Valves

NSC Controls

DISCLAIMER: Application drawings in this manual are conceptual only and do not purport to address all design, installation, code, or safety considerations. The diagrams in this manual are for reference use by code officials, designers and licensed installers. It is expected that installers have adequate knowledge of national and local codes, as well as accepted industry practices, and are trained on equipment, procedures, and applications involved. Drawings are not to scale. Refer to the boiler, control and module installer manuals for additional detailed information.


	Supply Sensor
	Comfort Zone Manager
	Purge Drain
	Heating zone
	Auto-Fill
	Air Eliminator
	Flow Check
	Condensate drain
	Comfort Room Controller
	Expansion Tank
	PRV Relief Piping
	Back-flow preventer
	Shut-off valve
	Circulator
	Zone Valve

Note: Larger heating systems may require an additional expansion tank external to the boiler – see manual for details.

Note: See Appendix B for Primary/Secondary piping requirements

System # 18

Heatronic Internal Wiring

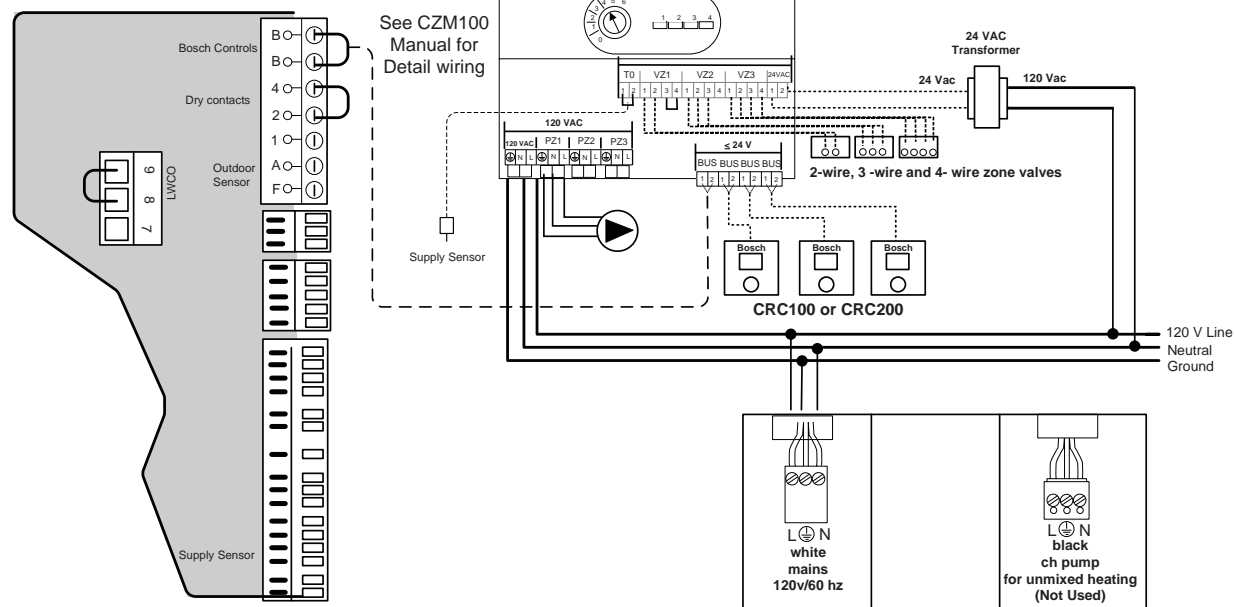

Note: For Low Water Cutoff Wiring see Appendix D of this manual


Wiring:**Low Voltage**


- ▶ Wire BUS terminal of CZM100 to Terminal BB of Greenstar boiler Heatronic control
- ▶ Wire CRC controllers to BUS terminals of CZM100 (See Appendix A for Room Controller Settings)
- ▶ Provide 24 Vac from transformer to Terminals 1 and 2 of CZM100 labeled "24 VAC"
- ▶ Wire zone valves to "VZ" terminals of CZM100 – remove jumper from terminal 3 and 4 for 3-wire and 4-wire zone valves
- ▶ Wire Supply Sensor to "TO" connection of CZM100


Line Voltage

- ▶ Wire Main power supply (120 v) to White molex of Boiler (external junction box) and to 120 VAC input of CZM100
- ▶ Wire 120 VAC output of PZ1 to system pump

Heatronic Settings:

Boiler Heating Dial 	Typical supply temperatures	Application
1	approx. 95 °F (35 °C)	Frost protection
2	approx. 109 °F (43 °C)	
3	approx. 122 °F (50 °C)	Radiant floor heating
4	approx. 140 °F (60 °C)	Panel radiator system
5	approx. 153 °F (67 °C)	Cast Iron radiator system
6	approx. 167 °F (75 °C)	
max	Approx. 194 °F (90°C)	Baseboard & convector system

DHW thermostat 	Typical DHW temperatures
min	approx. 104 °F (40 °C)
e	approx. 122 °F (50 °C)
max	approx. 140 °F (60 °C)

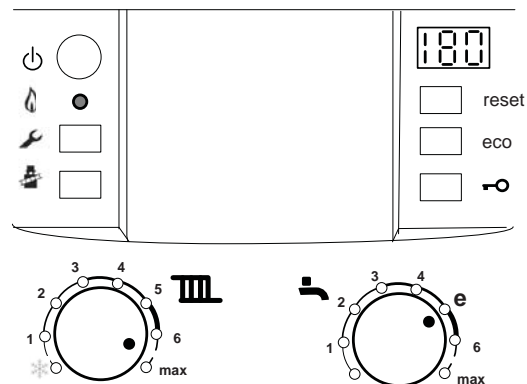

System #19

Multi Zone

Combi floor boiler

Zone Valves

Zone Relay


DISCLAIMER: Application drawings in this manual are conceptual only and do not purport to address all design, installation, code, or safety considerations. The diagrams in this manual are for reference use by code officials, designers and licensed installers. It is expected that installers have adequate knowledge of national and local codes, as well as accepted industry practices, and are trained on equipment, procedures, and applications involved. Drawings are not to scale. Refer to the boiler, control and module installer manuals for additional detailed information.

+	Purge Drain
	Heating zone
	Auto-Fill
	Air Eliminator
	Flow Check
	Condensate drain
	Room Thermostat
	Expansion Tank
	PRV relief piping
	Back-flow preventer
	Shut-off valve
	Circulator
	Zone Valve

Note: Internal Low Loss Header in **open** position

Note: Larger heating systems may require an additional expansion tank external to the boiler – see manual for details.

System # 19

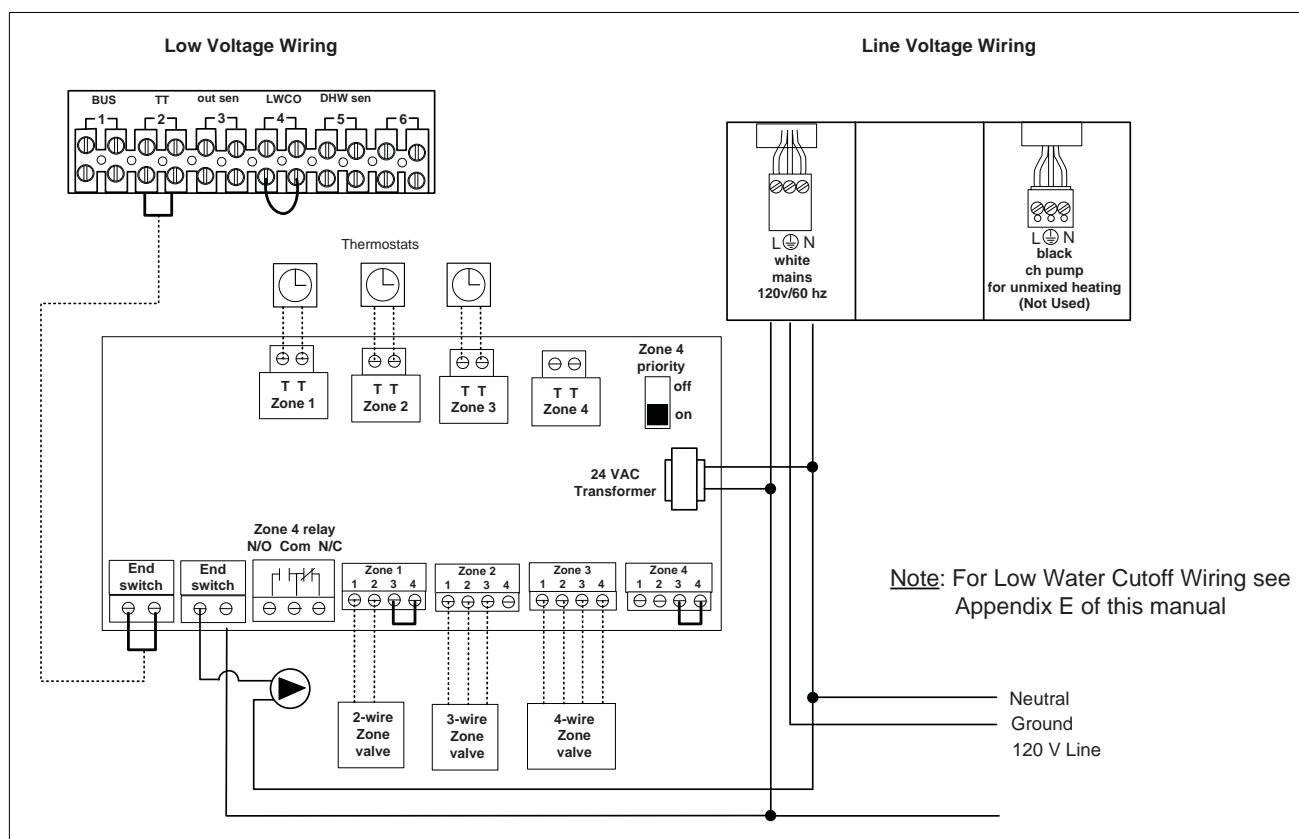

Wiring:


Low Voltage


- Remove factory jumper from terminal #2 and connect End Switch of Multi-Zone relay (dry contacts only) to terminal #2


Line Voltage

- Wire Main power supply (120 v) to White molex of Boiler
- Wire System circulator to Zone Relay end switch

Heatronic Settings:

Boiler Heating Dial 	Typical supply temperatures	Application
1	approx. 95 °F (35 °C)	Frost protection
2	approx. 109 °F (43 °C)	
3	approx. 122 °F (50 °C)	Radiant floor heating
4	approx. 140 °F (60 °C)	Panel radiator system
5	approx. 153 °F (67 °C)	Cast Iron radiator system
6	approx. 167 °F (75 °C)	
max	Approx. 194 °F (90 °C)	Baseboard & convector system

DHW thermostat 	Typical DHW temperatures
min	approx. 59 °F (15 °C)
e	approx. 131 °F (55 °C)
max	approx. 158 °F (70 °C)

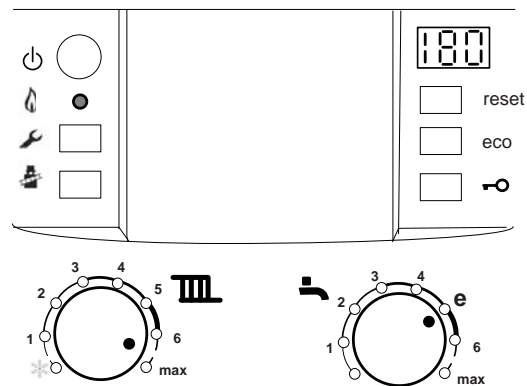

System # 20

Multi Zone

Combi floor boiler

Zone Valves

NSC Controls


DISCLAIMER: Application drawings in this manual are conceptual only and do not purport to address all design, installation, code, or safety considerations. The diagrams in this manual are for reference use by code officials, designers and licensed installers. It is expected that installers have adequate knowledge of national and local codes, as well as accepted industry practices, and are trained on equipment, procedures, and applications involved. Drawings are not to scale. Refer to the boiler, control and module installer manuals for additional detailed information.

	Comfort Zone Manager
	Purge Drain
	Heating zone
	Auto-Fill
	Air Eliminator
	Flow Check
	Condensate drain
	Comfort Room Controller
	Expansion Tank
	PRV Relief Piping
	Back-flow preventer
	Shut-off valve
	Circulator
	Zone Valve

Note: Internal Low Loss Header in **open** position

Note: Larger heating systems may require an additional expansion tank external to the boiler – see manual for details.

System #20

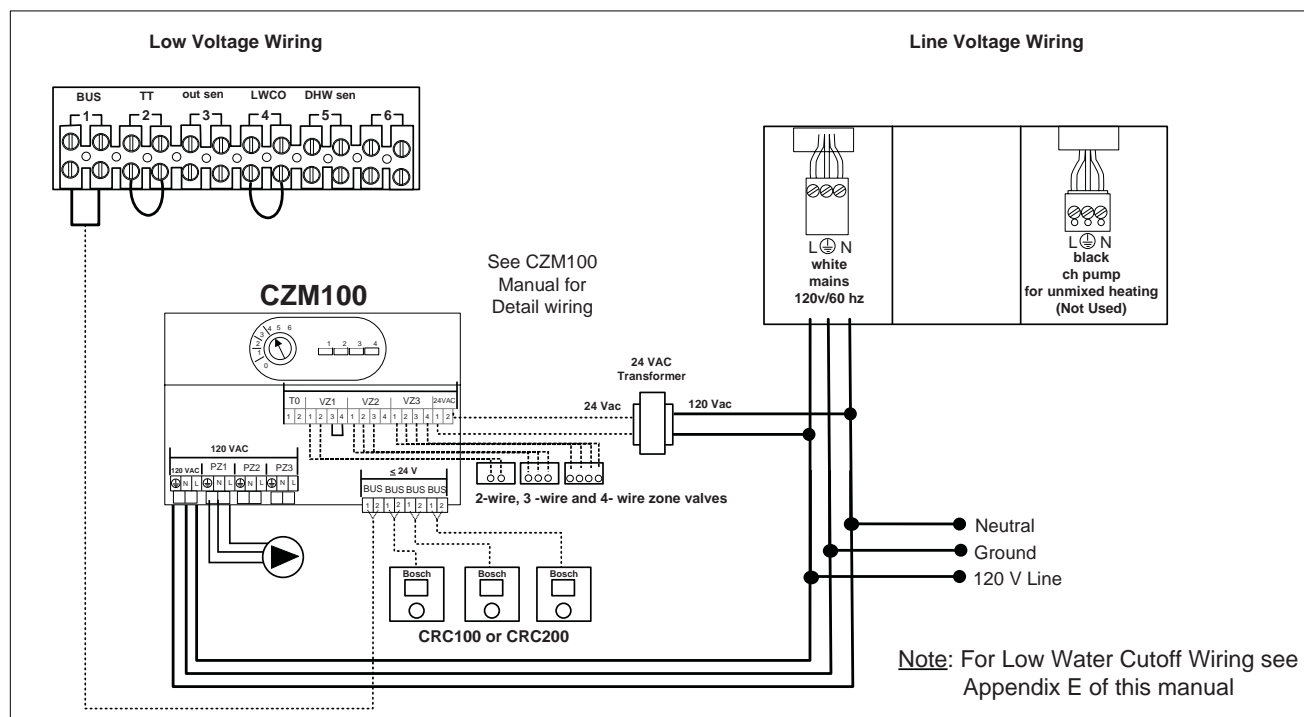

Wiring:

Low Voltage

- Wire BUS terminal of CSM100 to Terminal #1 of Greenstar FS boiler
- Wire CRC controllers to BUS terminals of CSM100
- Provide 24 Vac from transformer to Terminals 1 and 2 of CSM100 labeled "24 VAC"
- Wire zone valves to "VZ" terminals of CSM100 – remove jumper from terminal 3 and 4 for 3-wire and 4-wire zone valves
- See Appendix A for Room Controller Settings


Heatronic Settings:

Boiler Heating Dial	Typical supply temperatures	Application
1	approx. 95 °F (35 °C)	Frost protection
2	approx. 109 °F (43 °C)	
3	approx. 122 °F (50 °C)	Radiant floor heating
4	approx. 140 °F (60 °C)	Panel radiator system
5	approx. 153 °F (67 °C)	Cast Iron radiator system
6	approx. 167 °F (75 °C)	
max	Approx. 194 °F (90 °C)	Baseboard & convector system

DHW thermostat	Typical DHW temperatures
min	approx. 104 °F (40 °C)
e	approx. 122 °F (50 °C)
max	approx. 140 °F (60 °C)

Line Voltage

- Wire Main power supply (120 v) to White molex of Boiler and to 120 VAC input of CSM100
- Wire 120 VAC output of PZ1 to system pump

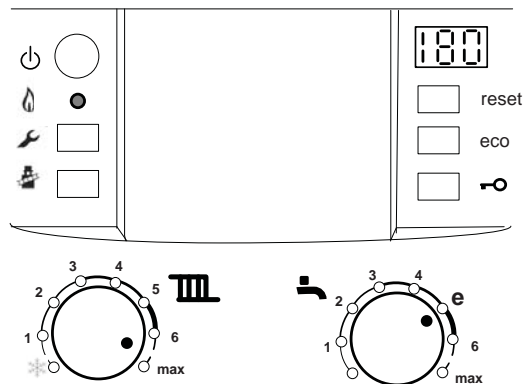

System #21

Multi Zone

Heat only wall boiler

Zone Valves

Indirect Tank

Zone Relay

DISCLAIMER: Application drawings in this manual are conceptual only and do not purport to address all design, installation, code, or safety considerations. The diagrams in this manual are for reference use by code officials, designers and licensed installers. It is expected that installers have adequate knowledge of national and local codes, as well as accepted industry practices, and are trained on equipment, procedures, and applications involved. Drawings are not to scale. Refer to the boiler, control and module installer manuals for additional detailed information.

Created

Released

Changed

Bases

No.

Date

Bosch


	Supply Sensor
	Outdoor Sensor
	FW200
	Purge Drain
	Heating zone
	Auto-Fill
	Air Eliminator
	Flow Check
	Condensate drain
	Room Thermostat
	Expansion Tank
	PRV Relief Piping
	Back-flow preventer
	Shut-off valve
	Circulator
	Zone Valve

...

Note: See Appendix B for Primary/Secondary piping requirements

System # 21

Heatronic Internal Wiring

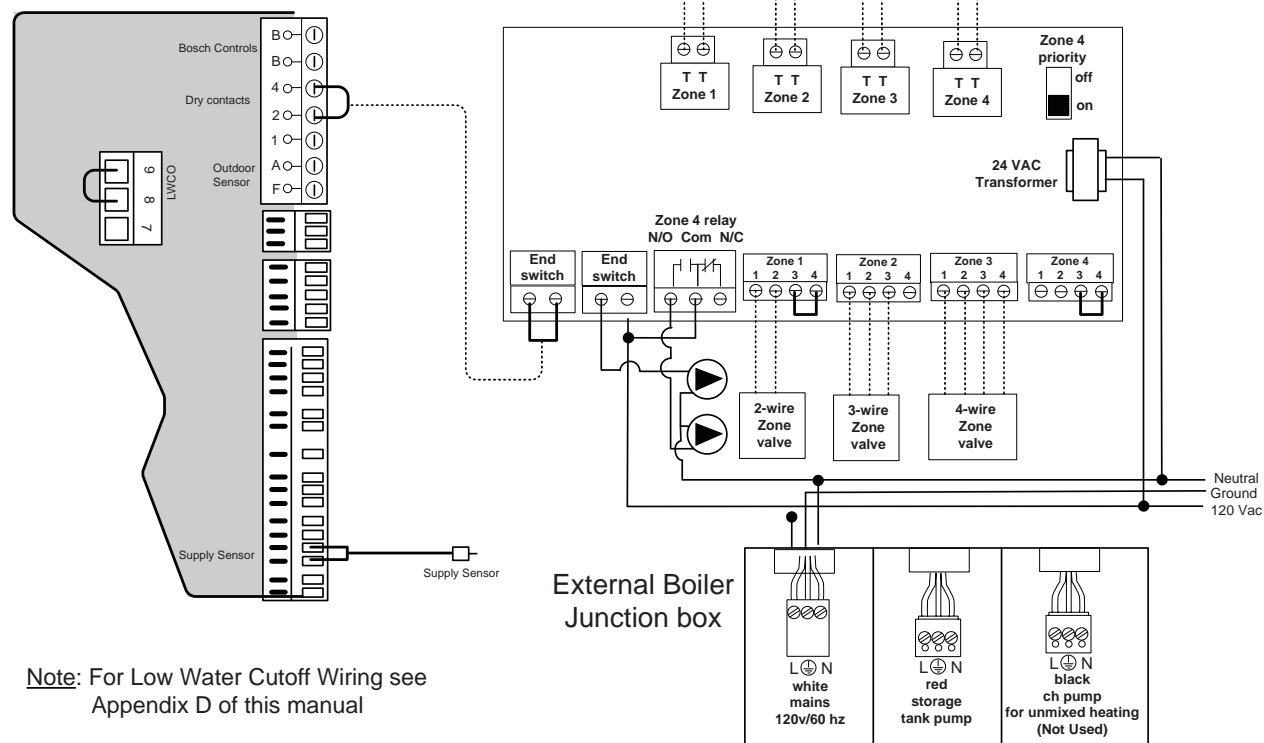

Wiring:

Low Voltage

- Remove factory jumper from terminal #2 & #4 connect End Switch of Multi-Zone relay (dry contacts only)


Heatronic Settings:

Boiler Heating Dial	Typical supply temperatures	Application
1	approx. 95 °F (35 °C)	Frost protection
2	approx. 109 °F (43 °C)	
3	approx. 122 °F (50 °C)	Radiant floor heating
4	approx. 140 °F (60 °C)	Panel radiator system
5	approx. 153 °F (67 °C)	Cast Iron radiator system
6	approx. 167 °F (75 °C)	
max	Approx. 194 °F (90 °C)	Baseboard & convector system

DHW thermostat	Typical DHW temperatures
min	approx. 59 °F (15 °C)
e	approx. 131 °F (55 °C)
max	approx. 158 °F (70 °C)

Line Voltage

- Wire Main power supply (120 v) to White molex of Boiler
- Wire System Circulator to end switch of Relay
- Wire DHW Circulator to Normally Open priority contacts of Relay

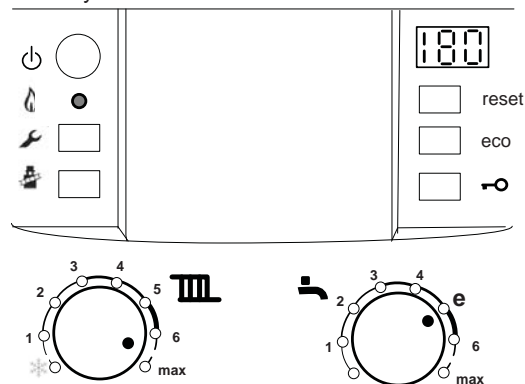

System # 22

Multi Zone

Heat only wall boiler

Zone Valves


Indirect Tank






NSC Controls


...

DISCLAIMER: Application drawings in this manual are conceptual only and do not purport to address all design, installation, code or safety considerations. The diagrams in this manual are for reference use by code officials, designers and licensed installers. It is expected that installers have adequate knowledge of national and local codes, as well as accepted industry practices, and are trained on equipment, procedures, and applications involved. Drawings are not to scale. Refer to the boiler, control and module installer manuals for additional detailed information.

Created	
Released	
Changed	
Bases	
No.	
Date	




	PRV Relief Piping
	Back-flow preventer
	Shut-off valve
	Circulator
	Zone Valve

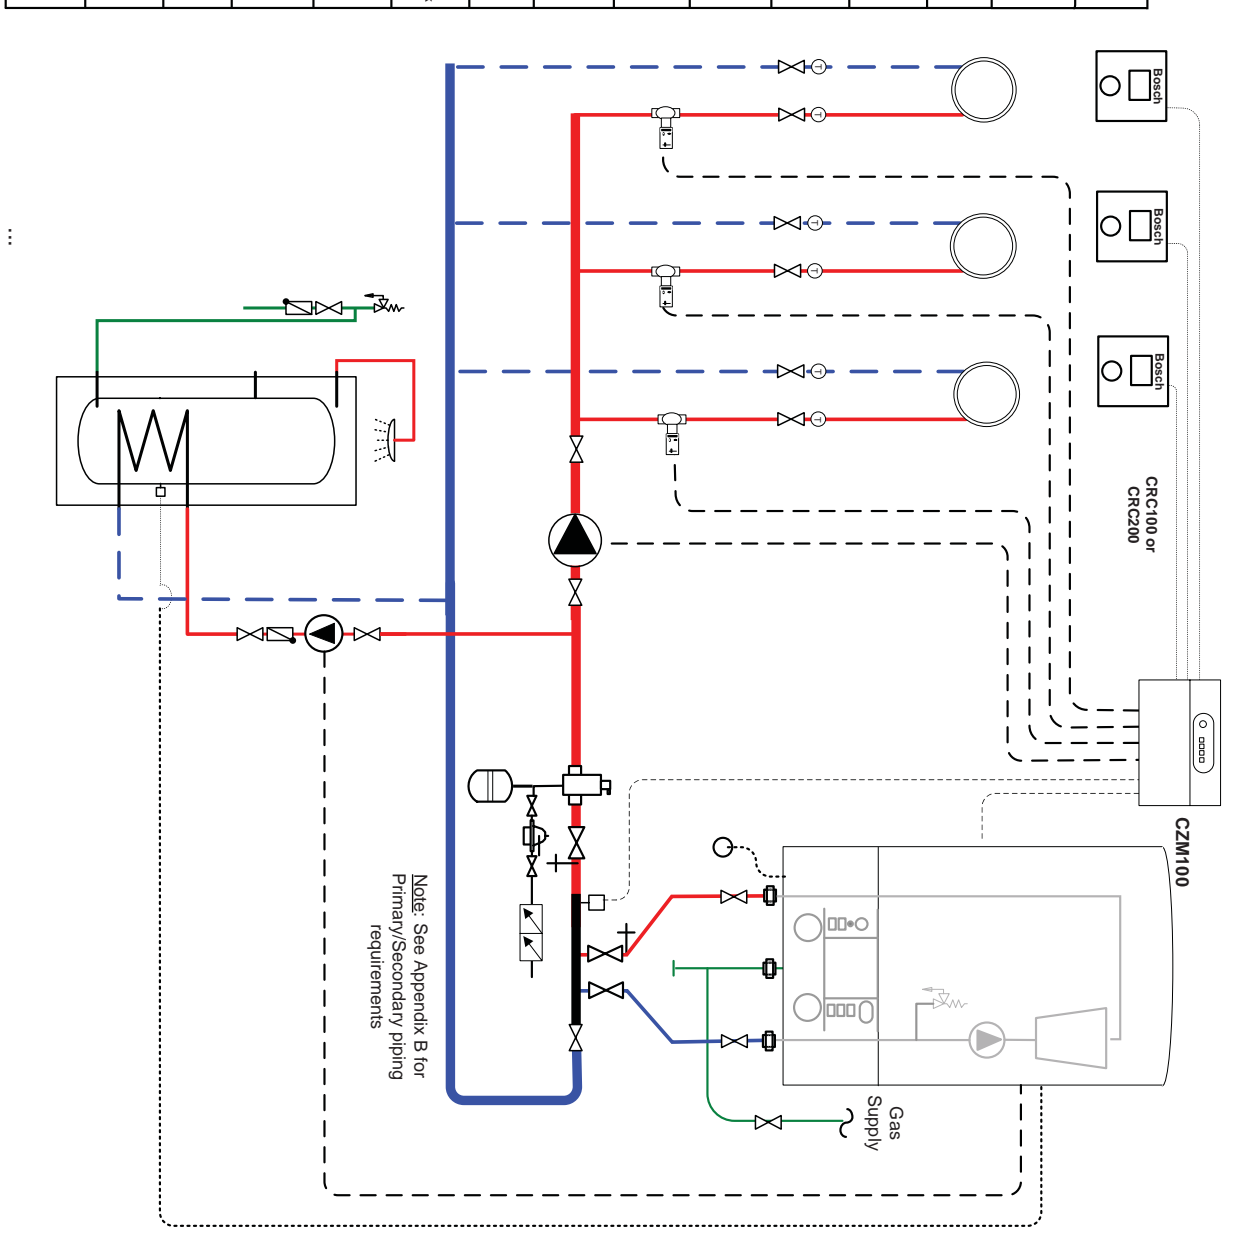


System # 22

Heatronic Internal Wiring

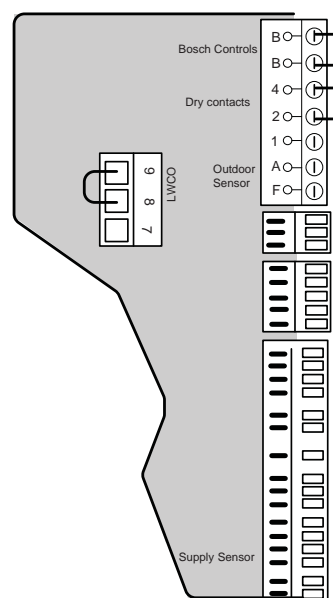

See CZM100
Manual for
Detail wiring

CZM100

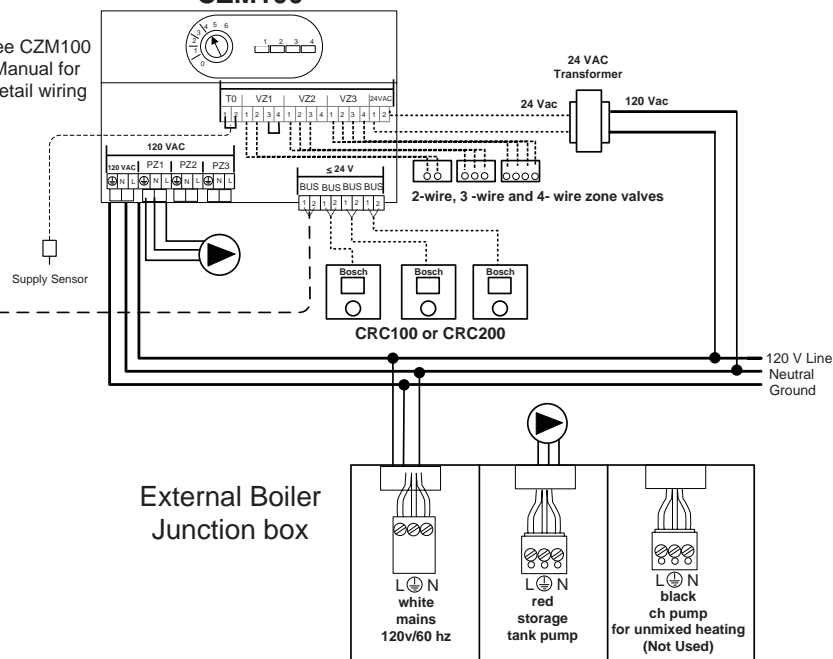

Note: For Low Water Cutoff Wiring see Appendix D of this manual

Wiring:

Low Voltage

- Wire BUS terminal of CZM100 to Terminal BB of Greenstar boiler Heatronic control
- Wire CRC controllers to BUS terminals of CZM100 (See Appendix A for Room Controller Settings)
- Provide 24 Vac from transformer to Terminals 1 and 2 of CZM100 labeled "24 VAC"
- Wire zone valves to "VZ" terminals of CZM100 – remove jumper from terminal 3 and 4 for 3-wire and 4-wire zone valves
- Wire Supply Sensor to "TO" connection of CZM100


Line Voltage

- Wire Main power supply (120 v) to White molex of Boiler (external junction box) and to 120 VAC input of CZM100
- Wire 120 VAC output of PZ1 to system pump

Heatronic Settings:

Boiler Heating Dial	Typical supply temperatures	Application
1	approx. 95 °F (35 °C)	Frost protection
2	approx. 109 °F (43 °C)	
3	approx. 122 °F (50 °C)	Radiant floor heating
4	approx. 140 °F (60 °C)	Panel radiator system
5	approx. 153 °F (67 °C)	Cast Iron radiator system
6	approx. 167 °F (75 °C)	
max	Approx. 194 °F (90°C)	Baseboard & convector system






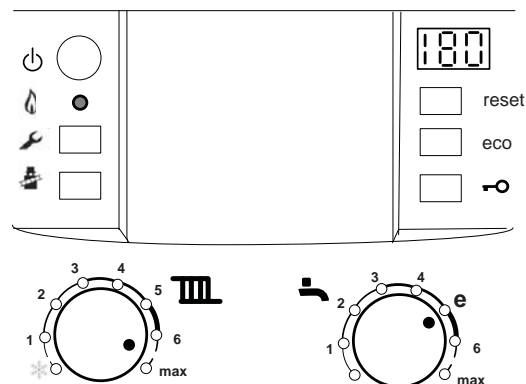








DHW thermostat	Typical DHW temperatures
min	approx. 59 °F (15 °C)
e	approx. 131 °F (55 °C)
max	approx. 158 °F (70 °C)




System #23


Multi Zone
Heat only floor boiler
Zone Valves
Indirect Tank
Zone Relay

DISCLAIMER: Application drawings in this manual are conceptual only and do not purport to address all design, installation, code, or safety considerations. The diagrams in this manual are for reference use by code officials, designers and licensed installers. It is expected that installers have adequate knowledge of national and local codes, as well as accepted industry practices, and are trained on equipment, procedures, and applications involved. Drawings are not to scale. Refer to the boiler, control and module installer manuals for additional detailed information.

	Tank thermostat
	Purge Drain
	Heating zone
	Auto-Fill
	Air Eliminator
	Flow Check
	Condensate drain
	Room Thermostat
	Expansion Tank
	PRV Relief Piping
	Back-flow preventer
	Shut-off valve
	Circulator
	Zone Valve

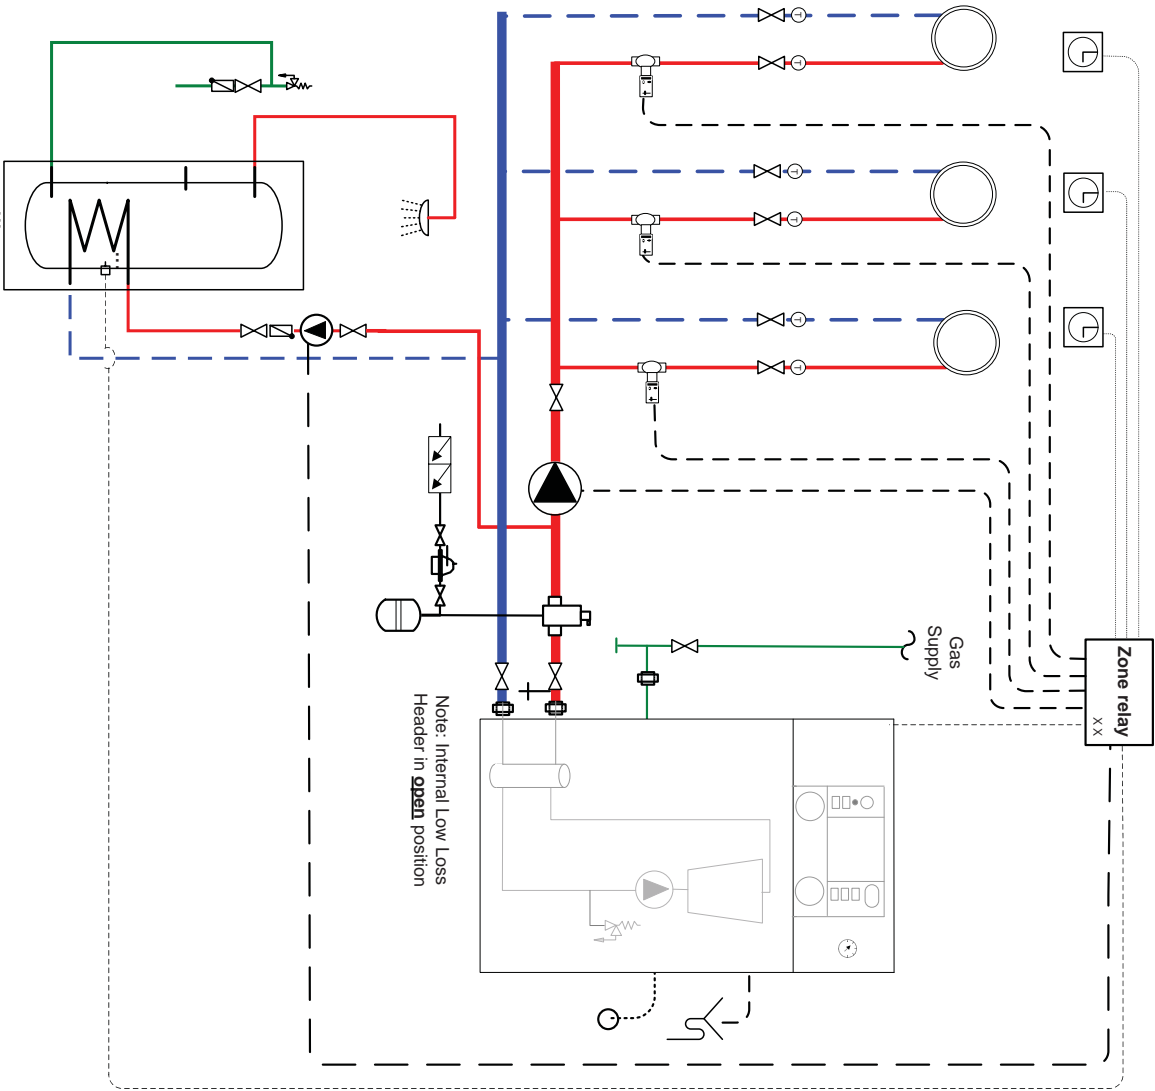

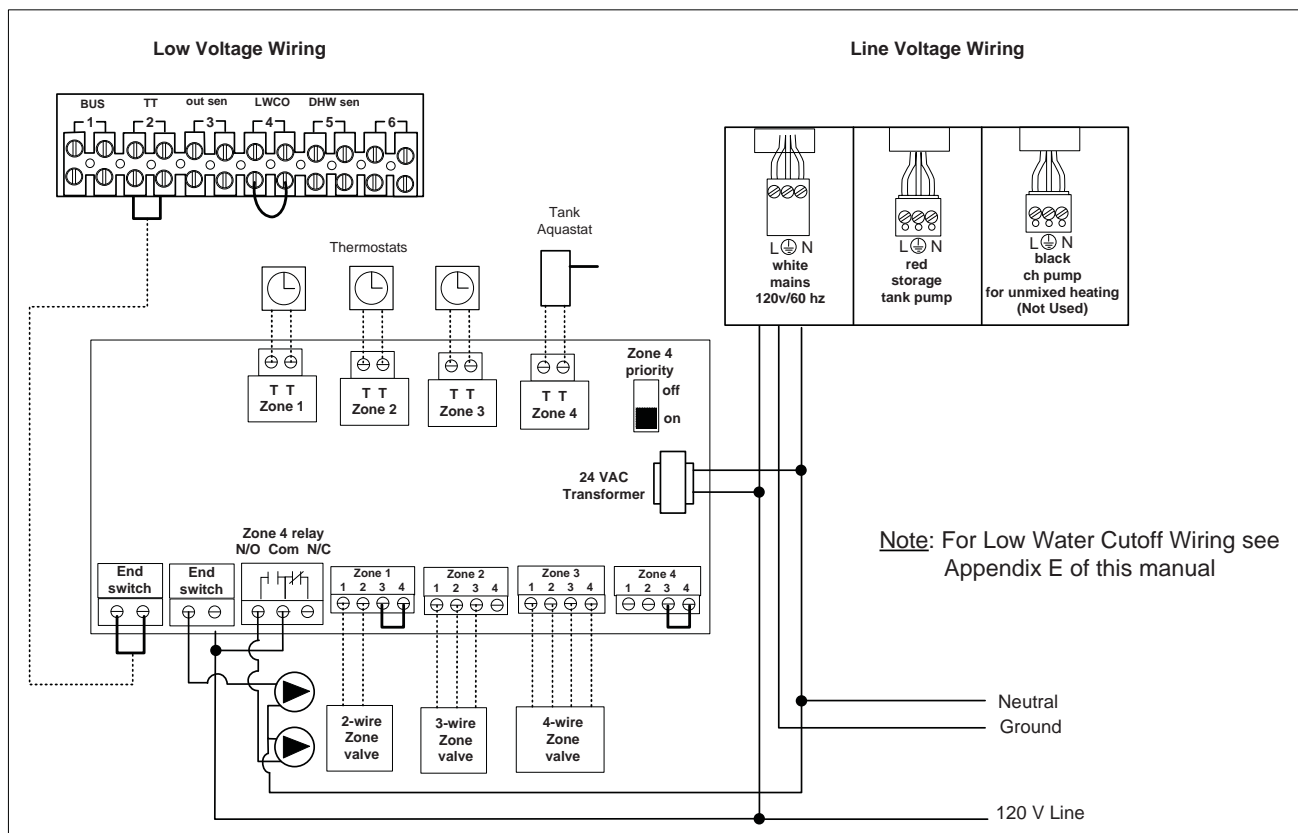

System # 23

**Wiring:****Low Voltage**

- Remove factory jumper from terminal #2 and connect End Switch of Multi-Zone relay (dry contacts only) to terminal #2


Heatronic Settings:

Boiler Heating Dial 	Typical supply temperatures	Application
1	approx. 95 °F (35 °C)	Frost protection
2	approx. 109 °F (43 °C)	
3	approx. 122 °F (50 °C)	Radiant floor heating
4	approx. 140 °F (60 °C)	Panel radiator system
5	approx. 153 °F (67 °C)	Cast Iron radiator system
6	approx. 167 °F (75 °C)	
max	Approx. 194 °F (90 °C)	Baseboard & convactor system

DHW thermostat 	Typical DHW temperatures
min	approx. 59 °F (15 °C)
e	approx. 131 °F (55 °C)
max	approx. 158 °F (70 °C)

Line Voltage

- Wire Main power supply (120 v) to White molex of Boiler
- Wire System Circulator to end switch of Relay
- Wire DHW Circulator to Normally Open priority contacts of Relay

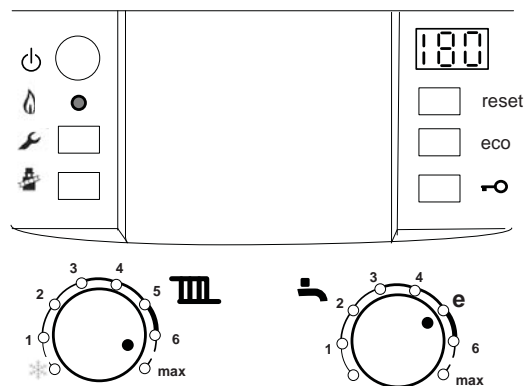

















System # 24

Multi Zone
Heat only floor boiler
Zone Valves
Indirect Tank
NSC Controls


DISCLAIMER: Application drawings in this manual are conceptual only and do not purport to address all design, installation, code, or safety considerations. The diagrams in this manual are for reference use by code officials, designers and licensed installers. It is expected that installers have adequate knowledge of national and local codes, as well as accepted industry practices, and are trained on equipment, procedures, and applications involved. Drawings are not to scale. Refer to the boiler, control and module installer manuals for additional detailed information.

Created	
Released	
Changed	
Bases	
No.	
Date	
Bosch	

	Tank thermostat
	Comfort Zone Manager
	Purge Drain
	Heating zone
	Auto-Fill
	Air Eliminator
	Flow Check
	Condensate drain
	Comfort Room Controller
	Expansion Tank
	PRV Relief Piping
	Back-flow preventer
	Shut-off valve
	Circulator
	Zone Valve

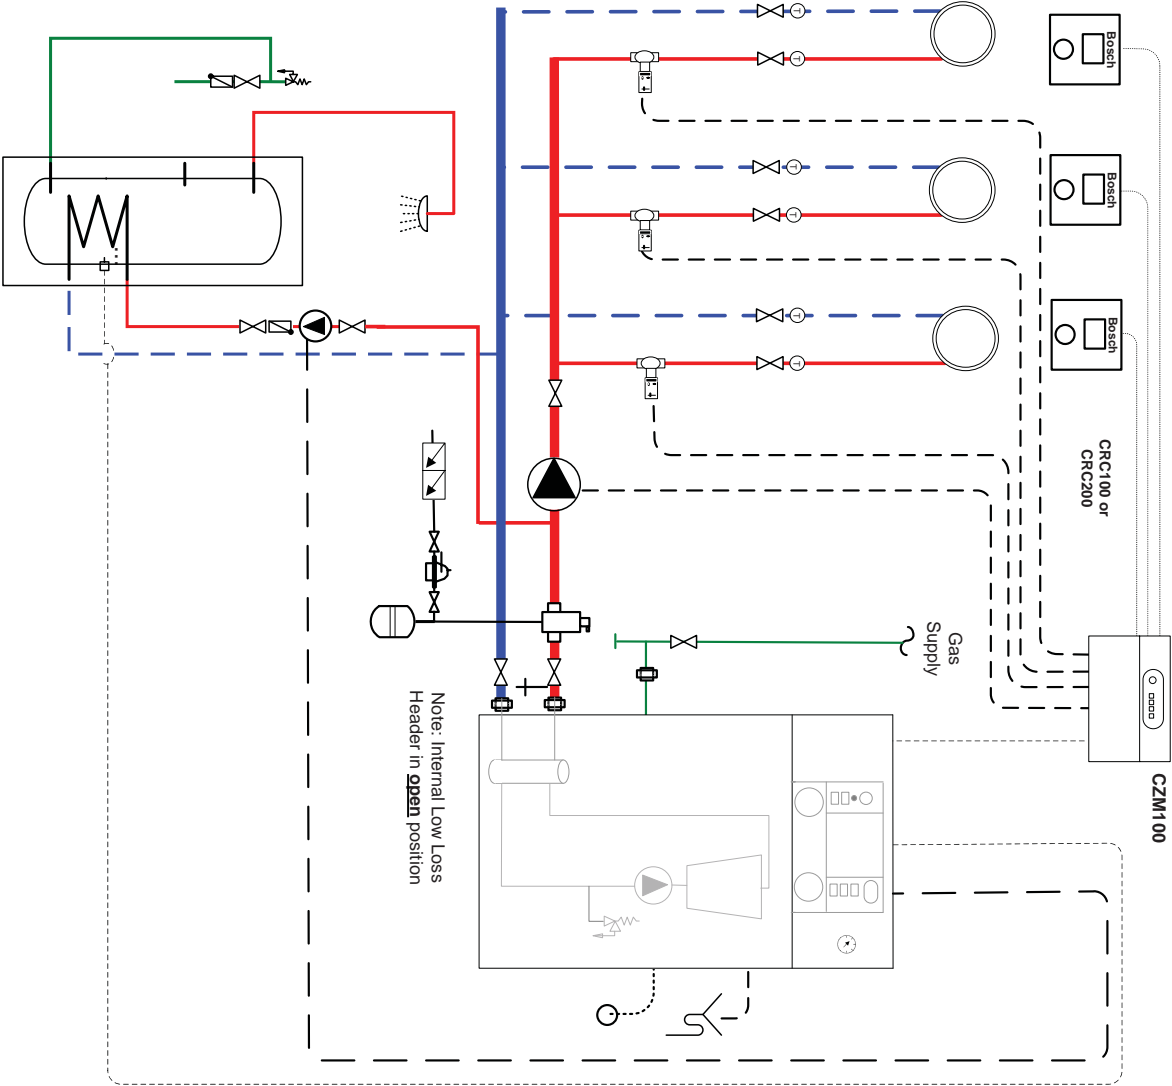

System #24

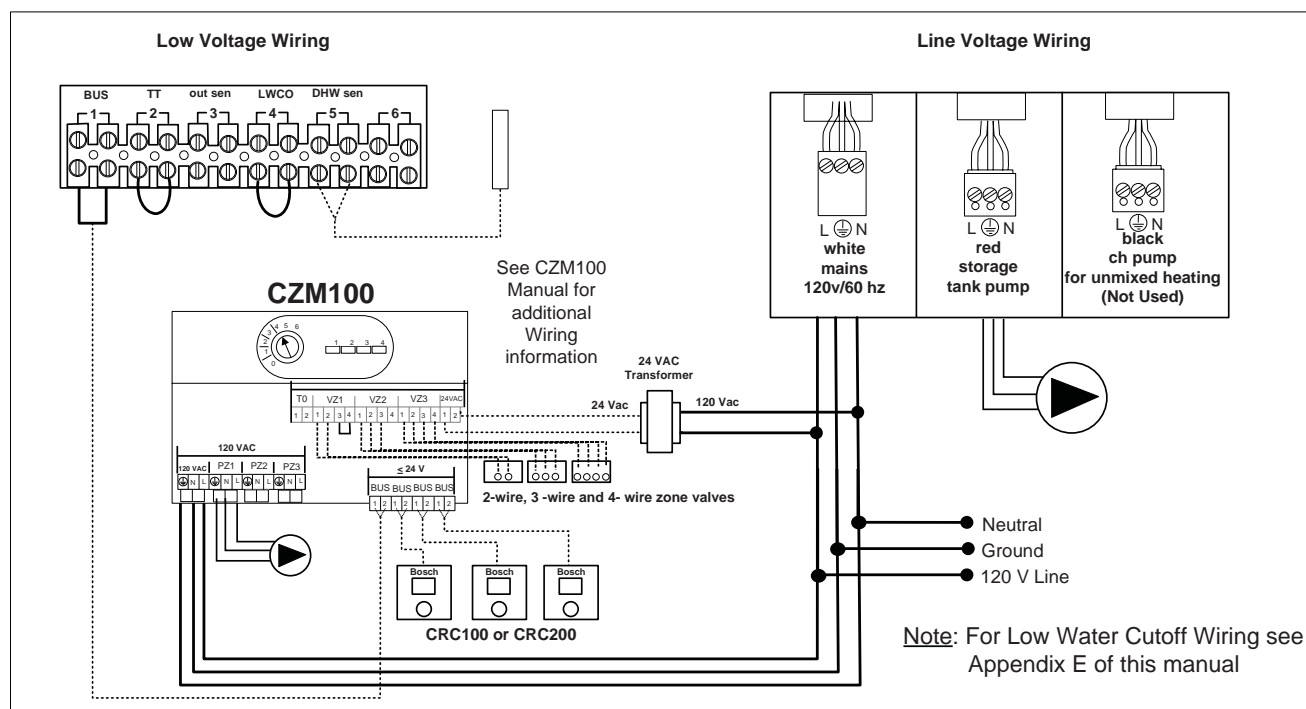

Wiring:

Low Voltage

- ▶ Wire BUS terminal of CQM100 to Terminal #1 of Greenstar FS boiler
- ▶ Wire CRC controllers to BUS terminals of CQM100
- ▶ Provide 24 Vac from transformer to Terminals 1 and 2 of CQM100 labeled "24 VAC"
- ▶ Wire zone valves to "VZ" terminals of CQM100 – remove jumper from terminal 3 and 4 for 3-wire and 4-wire zone valves
- ▶ Wire Greenstar DHW sensor to Terminal 5 of Boiler
- ▶ See Appendix A for Room Controller Settings


Line Voltage

- ▶ Wire Main power supply (120 v) to White molex of Boiler and to 120 VAC input of CQM100
- ▶ Wire 120 VAC output of PZ1 on CQM100 to system pump
- ▶ Wire 120 VAC output of RED Molex on Greenstar to DHW Circulator

Heatronic Settings:

Boiler Heating Dial	Typical supply temperatures	Application
1	approx. 95 °F (35 °C)	Frost protection
2	approx. 109 °F (43 °C)	
3	approx. 122 °F (50 °C)	Radiant floor heating
4	approx. 140 °F (60 °C)	Panel radiator system
5	approx. 153 °F (67 °C)	Cast Iron radiator system
6	approx. 167 °F (75 °C)	
max	Approx. 194 °F (90 °C)	Baseboard & convactor system

DHW thermostat	Typical DHW temperatures
min	approx. 59 °F (15 °C)
e	approx. 131 °F (55 °C)
max	approx. 158 °F (70 °C)

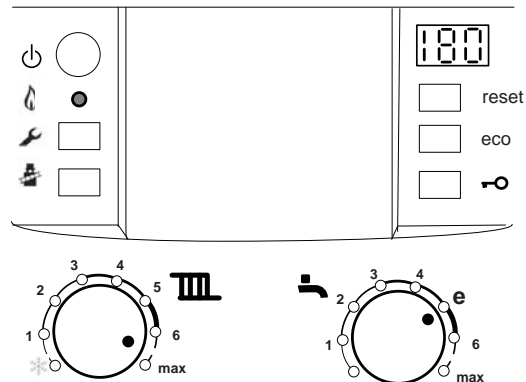


Appendix A: Quick Set-up Guide for Room Controllers

CRC100 - Operation

The following table shows how to change a value in the service menu of the CRC100

① = Display

② = Dial

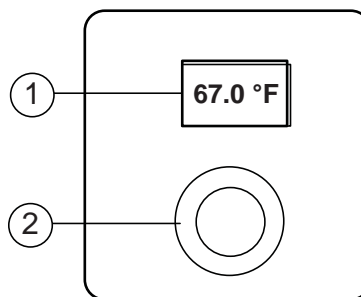

Open the service menu

1. press and hold dial until two dashes appear.	
2. Release dial to display the first setting.	

Changing the setting (e.g. heating zone H.C)

1. Turn the dial to select a setting.	
2. Press dial to show the current value.	
3. Press dial to change the value.	
4. Turn dial to set the required value.	
5. Press the dial to store the value.	
6. Press and hold dial until the setting is displayed again.	

Close the service menu

1. Press and hold dial until three dashes appear.	
2. Release dial. The display changes to the standard display, and the user interface works with the changed setting.	

Appendix A: Quick Set-up Guide for Room Controllers

Note: Please consult the installation manual for a complete overview of the controller settings and proper installation. The following guide is not a substitute for the installation manual.

CRC100 control set-up:

For single zone application where CRC100 is connected directly to the boiler:

- Set A.1 value to "CO"

For a multi- zone application where CRC100 is connected to a CZM100:

- Set H.C on each CRC100 to the appropriate zone number (1 thru 8)

CRC200 control set-up:

For single zone application where the CRC200 is connected directly to the boiler:

- Set DHW to "yes – pr. pump" if indirect tank is connected to the system
- Set "Heat System" to "High Temp" or "Low Temp" depending upon system requirement
- Set "Max Supply Temp" to appropriate maximum temperature for the system

For a multi- zone application where CRC200 is connected to a CZM100:

- Set HC on each CRC200 to the appropriate zone number (1 thru 8)

For CRC200 located in Zone #1:


- Set DHW to "yes – pr. pump" if indirect tank is connected to the system
- Set "Heat System" to "High Temp" or "Low Temp" depending upon zone requirement
- Set "Max Supply Temp" to appropriate maximum temperature for the zone

For CRC200 located in zones 2 thru 8:

- Set "Heat System" to "High Temp" or "Low Temp" depending upon zone requirement
- Set "Max supply Temp" to appropriate maximum temperature for the zone

Zone number and corresponding pump/Zone valve output on CZM100:

The CZM100 can support systems using Pumps or Zone valves but not both. The maximum number of CZM100 in a system is 3. The CZM100 address can be set by adjusting the potentiometer screw on the front of the CZM100 (see image right). Address #1 thru #3 is for systems using pumps. Address #4 thru #6 is for systems using zone valves. Charts below show the heating zone number and the corresponding pump or zone valve contacts on the CZM100.


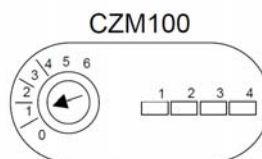


Pumps

Heating Zone Number	Coding and Connection to.....			Pump contacts
	CZM100 #1	CZM100 #2	CZM100 #3	
1	1	-	-	PZ1
2	1	-	-	PZ2
3	1	-	-	PZ3
4	-	2	-	PZ1
5	-	2	-	PZ2
6	-	2	-	PZ3
7	-	-	3	PZ1
8	-	-	3	PZ2

Heating Zone Number	Coding and Connection to.....			Zone Valve Contacts
	CZM100 #1	CZM100 #2	CZM100 #3	
1	4	-	-	VZ1
2	4	-	-	VZ2
3	4	-	-	VZ3
4	-	5	-	VZ1
5	-	5	-	VZ2
6	-	5	-	VZ3
7	-	-	6	VZ1
8	-	-	6	VZ2

Appendix B: Primary/Secondary piping for Greenstar Wall Boiler

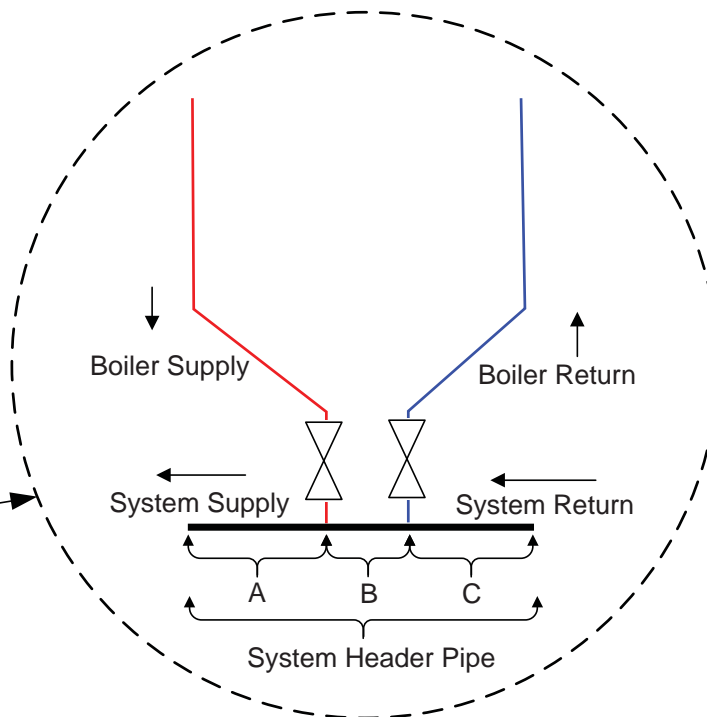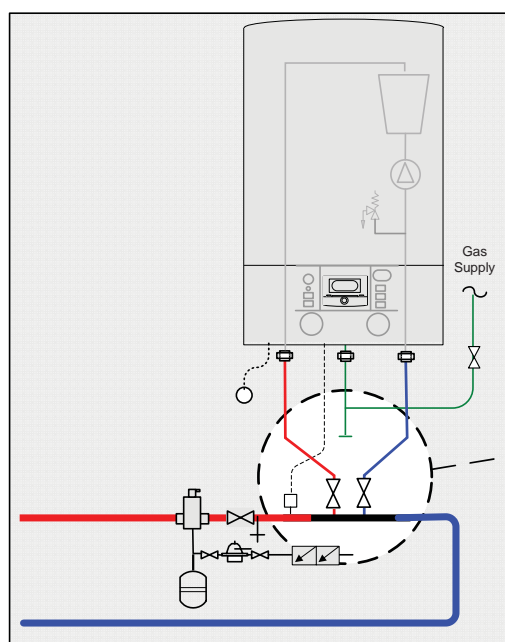

Piping Section	Description	Requirements
A	System Supply	Minimum length of 4 x pipe diameter based on System header pipe size
B	Closely Spaced Tees	Maximum distance of 4 x pipe diameter (center-to-center) based on System header pipe size
C	System Return	Minimum length of 8 x pipe diameter based on System header pipe

Boiler Input (btu/hr)	Boiler Supply/Return pipe diameter	System Supply/Return Header pipe diameter*	
		system ΔT of 20°	system ΔT of 10°
57,000	1"	1"	1.25"
79,000	1"	1"	1.25"
100,000	1"	1.25"	1.5"
131,000	1"	1.25"	1.5"
151,000	1"	1.5"	2.0"

*based on 2 – 4 ft/sec flow velocity.

Appendix C: FW200 Quick Set-up Guide



This is a quick reference to highlight the **BASIC programming** of this control. For a more in depth understanding or complete programming of the control, please refer to the FW 200 Installation and Operating manuals.



At any time, pressing the Menu button (Fig.1, pos.3) will bring you back to the standard display.



The FW200 is sold separately, and is not compatible any of the NSC components (CZM100, CRC100, CRC200).

Instructions for programming

► Set Date and Time upon initial start-up

- Turn dial (Fig.1, pos.1) to adjust time and date. Press the dial to finalize your selection.
- You will be asked about System configuration, which is only necessary if you have added additional controls. If you see this prompt, press and hold the menu button (Fig.1, pos.3) until it disappears.

► Set Date and Time after initial programming

- Push the menu button once and release. On the display **Vacation** will be highlighted.
- Turn dial counter-clockwise until **General Settings** is highlighted.
- Push dial once and release. **Time and Date** will be highlighted.
- Push dial again and **Time** will be highlighted. Set time by pushing dial and rotating. Once complete, push again to lock in time setting.
- Turn dial until **Date** is highlighted. Set date by pushing dial and turning to select. Push dial once to lock in date setting.

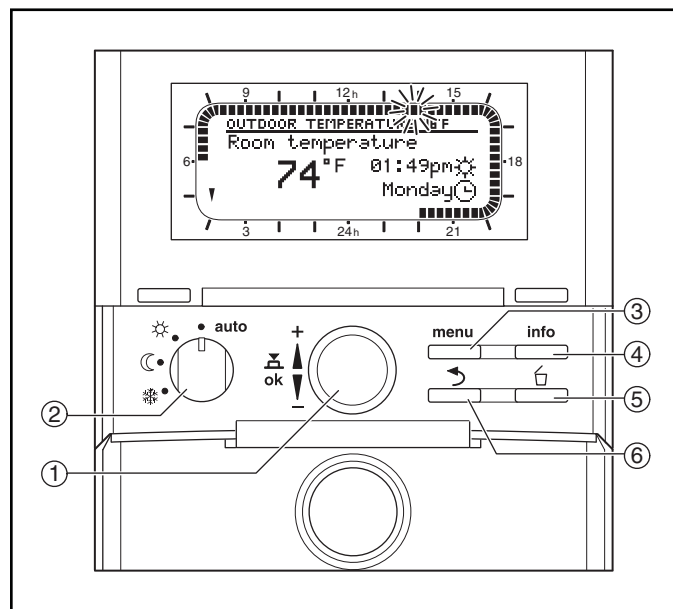


Fig. 1 Controller with front flap open

► Set for constant heating (no night set back)

This can be done two ways:

1. Turn selector (Fig.1, pos.2) to the Comfort Symbol (☀).
2. Or change programming.

To change programming:

- Press and release menu button. **Vacation** will be highlighted.
- Turn dial one click counter-clockwise to highlight **Heating** and push dial to select.
- Program will be highlighted. Push dial to select.
- **Activate** will be highlighted. Turn the dial one click to highlight **Edit** and push dial to select.
- Program A will be highlighted. Push dial to select.
- **Replace with preset program** will be highlighted. Turn the dial counter-clockwise to display **All days** and push dial to select.
- **P1** will be highlighted. Press the dial again and the display will flash.
- Turn dial one click clockwise to 12:00PM.
- Press the dial and rotate it until **Comf.** appears. The area around the display should fill in.
- Press dial again to lock in your program.
- Press the menu button to return to main display.

Appendix C: FW200 Quick Set-up Guide

► Set type of heating system



There are three separate default presets: Baseboard, Radiators, Radiant Floor. They have an approximate basepoint of 75°F. With this basepoint, the heating system will take some time to raise the room temperature in warmer weather. Please see the FW 200 Installation and Operating Instructions, "Heating circuit parameters" for more details on those presets. For a custom preset, see below.

- To open **INSTALLER SETTINGS**: press and hold the menu button for approx. 5 seconds. **System Configuration** will be highlighted.
- Turn dial one click counter-clockwise to highlight **Heating Parameters**.
- Press the dial, **Heating Circuit 1** will be highlighted.
- Press dial and **Heating circuit type** will be highlighted.
- Press dial and **Radiators** will be highlighted.
- Press dial again and **Radiators** will flash.
- Turn the dial to choose **Baseline/Design temp.**
- Press the dial, **Heating circuit type** will be highlighted.
- Turn the dial counter-clockwise. **Base Line** will be displayed.
- Press the dial and **78°F** (25 °C) will flash. This is the supply temperature at 65 °F (18 °C) outdoor temperature.
- Set accordingly (Fig. 2).
- Press the dial to confirm the setting.



For hydroair systems, the minimum supply temperature must be raised to the turn on temperature for that coil.

- Turn the dial until **Design Temp** is highlighted. Press the dial and **168°F** (75°C) will flash. This is the supply temperature at 5 °F (- 15 °C) outdoor temperature.
- Set accordingly (Fig.2).
- Press the dial to confirm the setting.



Refer to FW 200 Installation and Operating Instructions for more custom settings.

- Turn the dial counter-clockwise until **Maximum heating supply temperature** is highlighted.
- Press the dial
- Turn the dial to set the desired value.
- Press the dial to confirm the setting.
- Press menu button to return to main display.

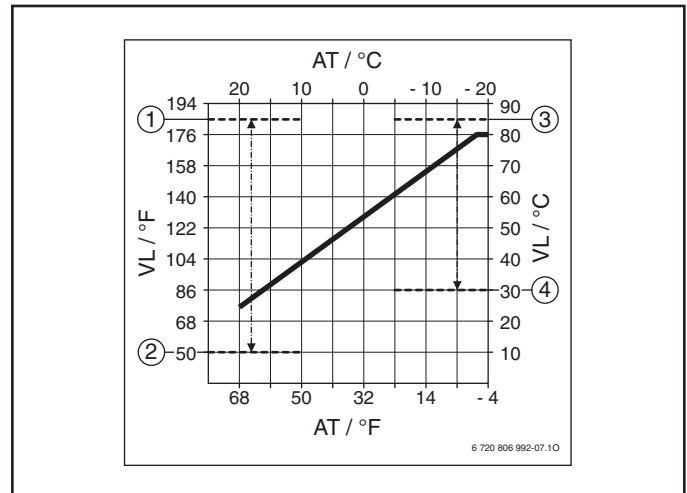


Fig. 2

Fig. 2 Legend


- [1] Maximum Base Line Adjustment 186 °F (85 °C)
- [2] Minimum Base Line Adjustment 50 °F (10 °C)
- [3] Maximum Design Temperature Adjustment 186 °F (85 °C)
- [4] Minimum Design Temperature Adjustment 86 °F (30 °C)
- AT Outdoor temperature
- VL Supply temperature

► Adjust warm weather shut down (WWSD)

- Press and hold the menu button for about 5 seconds. **System Configuration** will be highlighted.
- Turn dial one click counter-clockwise to highlight **Heating Parameters** and push dial to select.
- **Heating Circuit 1** will be highlighted.
- Turn the dial counter-clockwise until **Heating OFF at outdoor temperature** is highlighted.
- Press the dial and the display will flash. The default value is 68 °F (20 °C) and is adjustable from 50 °F (10 °C) to 77 °F (25 °C). Turning above 77 °F (25 °C) will move it to 210 °F (99 °C), which disables WWSD.
- Press the dial to confirm the setting.


To restore to factory defaults, hold the Delete button (Fig.1, pos.5) and the Menu button simultaneously for about 10 seconds. A count down display will appear. This will restore factory defaults. The only program that will be held is the date and time.

Appendix D: Wiring Hydrolevel Safgard 1100 Low Water Cut-off to Greenstar Wall Boiler

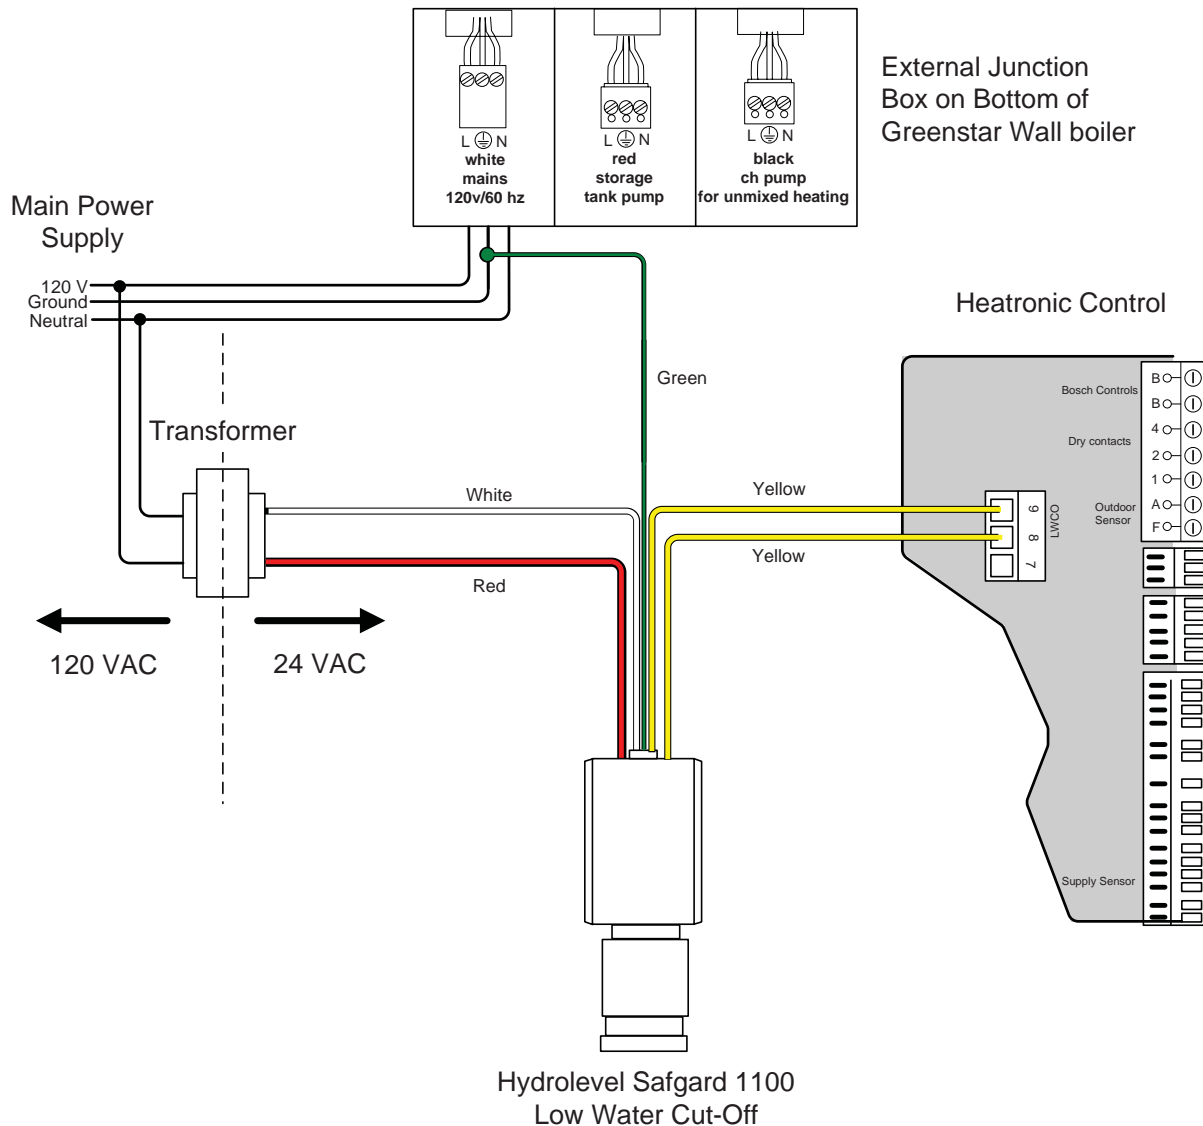

- ▶ Install a 24VAC 20VA Transformer near the boiler
- ▶ Follow LWCO manufacturer's instructions
- ▶ Connect the lead labeled BOILER GROUND (green) to the ground wire of the white plug in the boiler junction box
- ▶ Connect the leads labeled 24V HOT(red) and 24V COMMON(white) to the external 24VAC transformer (field supplied)
- ▶ Inside the Heatronic Control of the boiler, remove jumper from terminal #8 and #9 and connect the leads labeled SWITCH CONTACT (yellow) to terminals #8 and #9

Appendix E: Wiring Hydrolevel safgard 1100 Low Water Cut-Of to Greenstar Floor Boiler

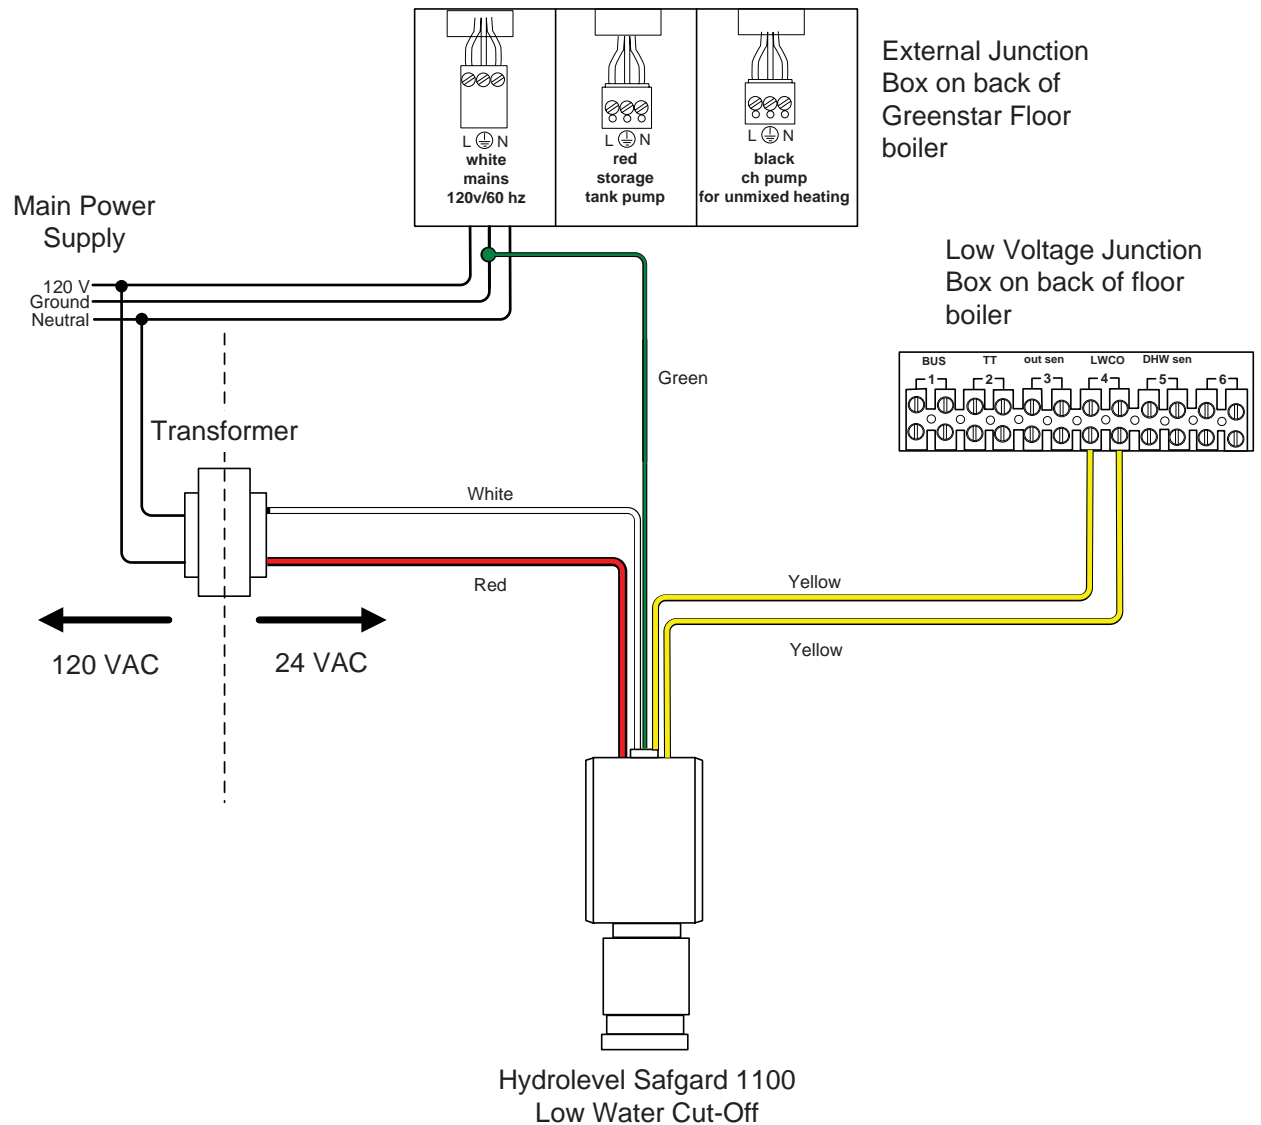

- ▶ Install a 24VAC 20VA Transformer near the boiler
- ▶ Follow LWCO manufacturer's instructions
- ▶ Connect the lead labeled BOILER GROUND (green) to the ground wire of the white plug in the boiler junction box
- ▶ Connect the leads labeled 24V HOT(red) and 24V COMMON(white) to the external 24VAC transformer (field supplied)
- ▶ AT the Low Voltage box on the rear of the boiler, remove the jumper across the LWCO connections and connect the leads labeled SWITCH CONTACT (yellow) to these connections.

United States and Canada

Bosch Thermotechnology Corp.
50 Wentworth Avenue
Londonderry, NH 03053

Tel: 866-642-3198
Fax: 603-965-7581
www.boschheatingandcooling.com